

RECHARGEABLE VACUUM CLEANER

Instruction manual

TAS-49



TAS-56



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This device is not a toy, do not leave small children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Never wind the cord around the appliance and do not bend it
- Ensure that the power cord does not come into contact with hot parts of this unit.
- Make sure the appliance has cooled down before cleaning and storing it.

- The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- Before cleaning, always unplug the appliance from the power supply and let it cool down.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Always remove the plug from the wall socket when the appliance is not in use.
- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.
- The appliance must be used and rested on a table or flat & stable surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- This appliance is only intended for household use.
- Regarding the instructions for cleaning, please refer to the below paragraph of the manual.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

SPECIAL SAFEGUARDS

Never use the device to suck up cement powder, filings, sawdust or metal powder, because they could block the filter, be abrasive to and damage the motor, causing the loss of the guarantee.

Don't try to open the container when the device is operating, because it is dangerous.

Recharge the device using only its recharge seat. Don't use different power suppliers or battery chargers, because it may be dangerous.

Don't use the recharge seat to recharge or supply electrical appliances other

Empty the container after each use.

Do not use the recharging device for other uses or other appliances.

Do not short-circuit the contacts of the battery charger.

Do not use the batteries included inside the appliance for other uses or other appliances.

Do not try to replace the internal batteries. Do not disassemble the appliance.

The non-working batteries included in the appliance will have to be disposed of separately as special waste, according to the norms in force at the authorized centres for the collection of special waste or at your municipality facility.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with



household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.




The symbol "RECYCLING" raise consumer awareness on the need to recycle its waste. Recycling is a process by which materials that compose a product in end of life (industrial or household waste) are reused in whole or part and will be returned to the initial production cycle.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

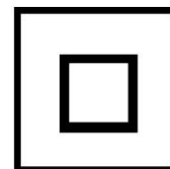

The symbol "IPx4" means the product is suitable for all weather conditions and resists to strong water splashes. From any direction. However, it does not withstand immersion.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).




For more information : <http://www.quefairedemesdechets.fr>

FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

APPLIANCE LOCATION

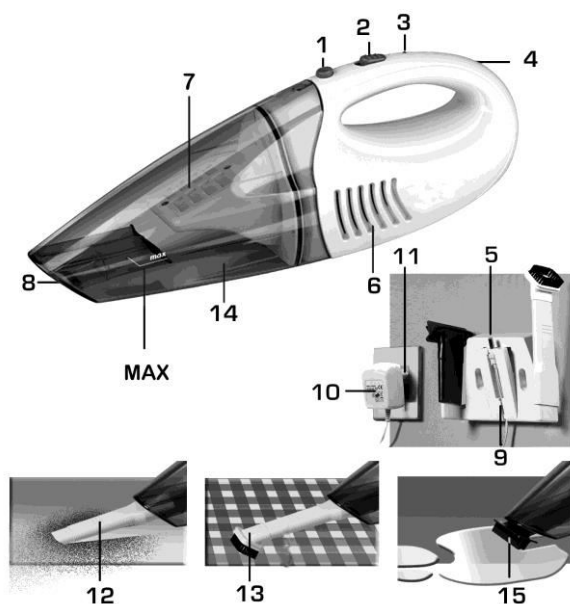

- 1) Open-container button
- 2) On/Off switch (turn on/turn off)
- 3) Light indicator
- 4) Handle
- 5) Recharge contact clutch
- 6) Ventilation openings
- 7) Dust filter
- 8) Suction nozzle
- 9) Recharge seat
- 10) Transformer
- 11) Recharge plug
- 12) Extension
- 13) Brush
- 14) Dust container
- 15) Liquid suction attachment

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

Fixing the recharge seat to the wall

- Fix the recharge seat (9) to the wall, on a stable, clean and dry surface.
- Use only the screws included with the appliance.
- Never place the seat on any container with water, full bathtubs or washbasins, sources of heat, stoves, ovens or other similar objects.
- The recharge plug must be turned upwards so that the appliance can be hung with the dust container (14) facing downwards.
- Take the device out of the box and remove the inner and outer packing.
- Make sure that the “motor filter” is correctly installed (see paragraph “How to empty the container and clean the filter”).
- Make sure the on/off switch (2) is in OFF position (turned off).
- Insert the plug of transformer into the power outlet.
- Place the device for recharging (see paragraph “recharge of the device”).

Note : For the first time you should recharge the device for at least 14 consecutive hours.

Using the device for dry suction

- Remove the device from its recharge seat (9).
- Use the extension attachment as final accessory ; apply pressure on it to attach it.
- The brush attachment (13) cannot be directly attached to the appliance; it must be attached to the extension attachment (12) only when you intend to use it.
- The appliance can suck up crumbs even without the terminal attachment.
- Turn on the device moving the switch (2) forward.
- While operating the device, always keep the suction nozzle turned downwards.
- To turn off the device, operate again on the switch (2) moving it backwards.

Note : Empty the container and clean the filter when :

- The suction power decreases.
- Crumbs come out from the suction nozzle.
- Each time after use, before replacing the device in its recharge seat.

Using the appliance to suck up liquids

Warning :

- Never use the appliance to suck up any other liquid than cold water.
- Do not exceed the indicated MAX level when sucking up liquids. (the MAX level must always be measured when the appliance is in the vertical position, with the suction inlet facing down).
- When sucking up liquids, always keep the appliance in the vertical position, with the suction inlet facing downwards. Never place the appliance in any other position and never allow liquids to come into contact with the motor.

How to do :

- Remove the appliance from its recharge seat (9).
- Use the liquid suction attachment as final attachment (15); apply pressure to it to attach it.
- Push the switch (2) forward to switch the appliance on.
- Keep the appliance on with the suction inlet facing down at all times.
- Pull the switch (2) back to switch the appliance off.

Note : Empty the container immediately after use and wash the filter.

- Rinse the container and the filter in cold water and let all parts dry completely before reassembling them.

Recharging the device

- Insert the plug of transformer into the power outlet.
- Make sure the on/off switch (2) is in OFF position (turned off).
- Please recharge the appliance. When the appliance will be correctly positioned then the LED will display a red light.

Note : when you are not using the device, keep it always placed in its recharge seat (9).

- After 5 minutes of continuous use, the suction power may decrease.
- Place the device in its seat and let it recharge for at least 2 hours.
- If the device is used until the batteries are completely flat, it should then be recharged with a complete recharging cycle of 14 consecutive hours.
- Don't let the device uncharged for a long time, because the inner accumulators may be damaged.

How to empty the container and clean the filter

- Press the opening button (1) and unhook the dust container (14).
- Remove the dust filter (7) from the inside of the container and empty the dust container (14).
- Clean the motor filter and, if necessary, clean the inside of the container with a dry cloth.
- Replace correctly the motor filter in the container.
- Reassemble again the container and the body, inserting at first the lower part and then the upper part, to obtain the complete closure

Note : After an intensive or long use, it is necessary to change the motor filter with a new one.

- Don't use the device if the motor filter is broken or worn out.

CLEANING AND MAINTENANCE

Before cleaning, always: switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

- In order to avoid the risk of short circuit, don't clean the device or its seat with wet cloths and don't use water.
- Keep it in a dry and clean place.
- Only the dust container (14) and the dust filter (7) can be washed in cold water. Let the parts dry completely before reassembly.
- Do not immerse the body of the appliance in water or other liquids.
- Do not immerse the power supplier in water or other liquids.
- Do not immerse the recharge seat or the transformer in water or other liquids.
- Do not wash the appliance or its parts in the dishwasher.
- Do not wash any components of the appliance in the dishwasher.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Vacuum cleaner:

- Power supply : 4.8V \equiv with rechargeable Battery : Ni-MH AA 1400mAh
- Power : 30W
- Protection : IPX4

Transformer:

- Power supply : Input 100-240V~ 50/60Hz ; Output 8.0V \equiv 0,2A 1,6W
- Norm : Class II

Made in P.R.C

The characteristics can change without preliminary preventing

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

The product fulfils the requirements of: EN 60335-2-2:2012 + A11:2012 +A1:2013
EN 60335-1:2012 + A11:2014 + A13:2017

ENVIRONMENTAL PROTECTION

(Destruction of Ni-MH or Ni-Cd batteries)

The appliance must be disconnected from the main power, when the battery is removed.

To remove the battery:

- Disassemble the unit and remove the battery.
 - THE BATTERY MUST BE REMOVED BEFORE THE UNIT IS GIVEN TO REBUS.
 - THE BATTERY MUST BE ELIMINATED IN A SAFE WAY.
- DO NOT THROW IN A TRASH CAN, BUT GIVE IN CENTRE OF WASTE.

**Imported by Sotech International
" LE PERIPOLE " N°C107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous bois - France**