

### ELECTRIC BLENDER

### Instruction manual



**TBL-751**



**TBL-766**



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

## IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
  - staff kitchen areas, in shops, offices and other working environments;
  - By clients in hotels, motels and other residential type environments;
  - Environment type like :
    - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance must not be used by children.
- ❑ This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- ❑ Cleaning and maintenance must not be made by children.
- ❑ Keep the appliance and its cord out of reach of children.
- ❑ This device is not a toy, do not leave children or people with disabilities to play with.
- ❑ In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- ❑ Caution ! Do not allow small children to play with the foil :  
**THERE IS A DANGER OF SUFFOCATION !**
- ❑ From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- ❑ Never immerse the appliance in water or any other liquid for any reason whatsoever.
- ❑ Never place it into the dishwasher.
- ❑ Never use the appliance near hot surfaces.
- ❑ Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- ❑ If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.

- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ This appliance is only intended for household use.
- ❑ Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.

(\*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

## **SPECIAL WARNING FOR BLENDERS**

- Always disconnect from power supply if it is left unattended and before assembling, disassembling or during cleaning.
- Switch off the appliance and disconnect from supply before changing accessories approaching parts that move in use.
- Potential injuries can occur with misuse. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning, as they are extremely sharp.
- Regarding the instructions for cleaningsurfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
- Regarding the instructions for the use of accessories, operation times and speed settings, refer to the below paragraphs.
- Never reach into the blender jar with your fingers or an object while the appliance is running.
- Make sure the blade unit is securely fastened to the blender jar before you assemble the blender jar onto the motor unit.
- If the blade unit gets stuck, Stop the blender, unplug the appliance before removing the ingredients that block the blades.
- Never fill the blender jar with ingredients hotter than 80°C.
- To prevent spillage, do not put more than 1.5 litre of liquid in the blender jar.
- Avoid spilling on the connector.
- There is a potential risk of injury if used incorrectly.
- When you process at a high speed or with hot liquids or ingredients that tend to foam, do not put more than 1L in the blender jar.

- Do not let the appliance run for more than 2 minutes at a time.
- Let the appliance cool down 2 min before you continue processing.
- Always make sure the lid is properly closed/assembled on the jar and the measuring cup is inserted properly in the lid before you switch on the appliance.

## GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment. precautions. (Risk of burns)



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE,



the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



**For more information :** <http://www.quefairedemesdechets.fr>

## FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

## TO KNOW IT'S UNIT

- 1 Measuring cup
- 2 Lid
- 3 Plastic jar assembly
- 4 Motor unit





## USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.
- Turn the speed selector to the desired one:
  - "0" = OFF or "1" the slow speed or "2" Fast speed
  - "P" Position = Pulse


Turning the selector to "P" to the left, the blender will operate at full power until the button is held.

To stop the unit, simply release the button or put on "0" position.


### Built-in safety lock

This feature ensure that you can only switch on the appliance if the blender jar, is assembled on the motor unit properly. If the blender jar is correctly assembled, the built-in safety lock will be unlocked.

The triangle ▼ (on the bowl) must be above the padlock symbol (on the engine block). For this, turn the bowl to the symbol. You should hear and feel a "click".

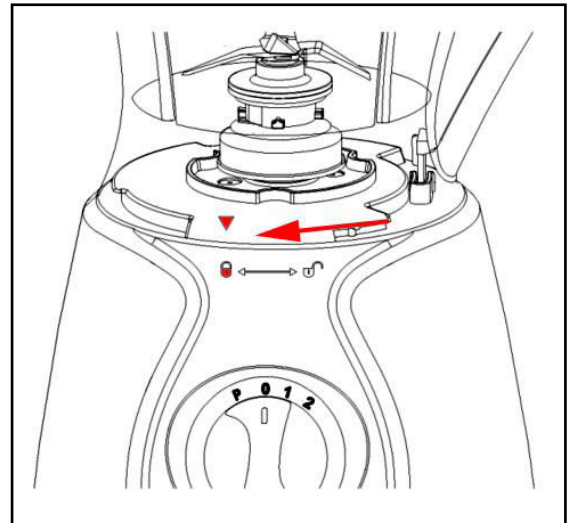

1. Place the food in the blender jar.
2. Put the lid on the bowl.
6. Place the bowl with the lid on the engine block.
3. Turn the cover symbol ▼ "triangle" of the handle to the line on the base of the blender ..
4. You should hear and feel a click when the cover is in place.

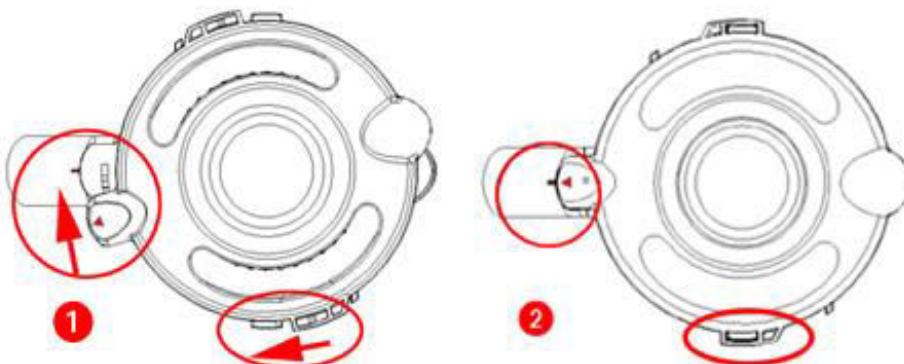



5. Check that the gear shift is 0.

(Do not forget to put the meter to cover the centre.

5. Plug the blender into an easily accessible wall outlet and in good condition.

6. Start the blender by turning the switch to speed 1 or 2 as needed.

1 = slow speed operation

2 = Continuous high speed operation

(Use 60 seconds max continuous!)

0 = OFF

Pulse = Pulse to use only a few seconds at full speed

NOTES: For frothing liquid, briefly turn the dial to P.

When you release the button, the blender stops.

To add ingredients, turn the measuring cup (on the lid) counter-clockwise and remove. Add the ingredients, put the measuring cup in place. (turn clockwise!)

If the blender turns barely, Put the speed selector to 0.

Open the cover and remove the pieces that block the device.

7. When the desired consistency is reached, turn the speed selector to 0.

8. Unplug

CAUTION: Do not remove the cover assembly / bowl before stopping the blades.

9. To remove the cover, turn counter-clockwise and lift the lid.

## **CLEANING AND MAINTENANCE**

Before cleaning, Always : switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, fork, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

## **STORAGE**

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place and out of reach from children.

## **GUARANTEE**

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

• The invoice and • The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase. The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void. After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

## **SPECIFICATIONS**

Power supply	220-240V~ 50Hz
Power	450W
Norm	Class II

MADE IN PRC

*The characteristics can change without preliminary preventing*

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

**Imported by Sotech International  
" LE PERIPOLE " N°A107  
33, Avenue du Marechal de Lattre de Tassigny  
94120 Fontenay sous bois - France**

## RECIPES

### **coffee smoothie**

250ml Espresso coffee

175ml milk

30-45ml Baileys liqueur

Sugar to your taste

5 small scoops of vanilla ice cream (approximately 250g)

Makes 2-3 glasses

Place the coffee, milk, liqueur and sugar (if used) into the blender jar. Add the ice cream.

Mix at speed 1 for 10 seconds and Smooth at speed 2 for 10 seconds. Serve immediately.

### **Gin and strawberry cocktail**

juice of 2 limes

200g strawberries

75ml gin

100ml lemonade

5ml icing sugar

8 ice cubes

Makes 3 glasses

Place the lime juice, strawberries, gin and icing sugar into the blender jar. Add the ice cubes.

Mix at speed 1 for 10 seconds and Smooth at speed 2 for 10 seconds. Serve immediately.

### **Rum and mango cocktail**

300ml pineapple juice

1 large mango, flesh cut up

1 large banana, cut up

200g natural yoghurt

90ml brown rum

14 ice cubes

Makes 6 glasses

Place the pineapple juice, mango, banana, yoghurt and rum into the blender jar. Add the ice cubes.

Mix at speed 1 for 10 seconds and Smooth at speed 2 for 10 seconds. Serve immediately.

### **Fruit surprise cocktail**

300ml pineapple and coconut juice  
8 large strawberries  
1/2 banana, cut up  
45ml vodka  
100g frozen raspberries  
4 ice cubes  
Makes 3 glasses

Place the juice, strawberries, banana and vodka into the blender jar.  
Add the frozen raspberries and ice cubes.  
Mix at speed 1 for 15 seconds and Smooth at speed 2 for 15 seconds. Serve immediately.

### **Banana milkshake**

3 large bananas (cut into chunks)  
600ml semi skimmed milk  
7 small scoops vanilla ice-cream (approximately 350g)  
Makes 5 glasses

Place the bananas and milk into the blender jar.  
Add the ice cream.  
Mix at speed 1 for 10 seconds and Smooth at speed 2 for 10 seconds. Serve immediately.

### **Raspberry cream**

4 x 150g raspberry yoghurt  
300ml orange juice  
175g frozen raspberries  
175g (approximately 2 scoops) frozen yoghurt dessert, vanilla flavour  
Makes 5 glasses

Place the fresh yoghurt and orange juice into the blender jar.  
Add the frozen raspberries and frozen yoghurt.  
Mix at speed 1 for 10 seconds and Smooth at speed 2 for 30 seconds. Serve immediately.

### **Choco mint shake**

475ml semi skimmed milk  
Few drops of peppermint essence to taste  
5 small scoops chocolate ice cream (approximately 250g)  
Makes 2-3 glasses

Place the milk and peppermint into the blender jar.  
Add the ice cream.  
Mix at speed 1 for 10 seconds and Smooth at speed 2 for 10 seconds. Serve immediately.

### **Pineapple and apricot smoothie**

250ml pineapple juice

250ml Greek yoghurt

250g fresh pineapple, cut into pieces

4 fresh apricots, stones removed and flesh cut up

12 ice cubes

Makes 4-5 glasses

Place the pineapple juice, yoghurt, pineapple and apricot into the blender jar.  
Add the ice cubes.

Mix at speed 1 for 20 seconds and Smooth at speed 2 for 30 seconds. Serve immediately.

### **“Banoffee” smoothie**

2 large bananas, cut up

250ml milk

5 small scoops toffee ice cream (approximately 250g)

Makes 2-3 glasses

Place the banana and milk into the blender jar.

Add the ice cream.

Mix at speed 1 for 10 seconds and Smooth at speed 2 for 20 seconds. Serve immediately.

### **Oriental splendor**

1 can lychees, drained weight 250g (juice not required)

600ml orange juice

125g fresh cream

12 ice cubes

Makes 4-5 glasses

Place the drained fruit, orange juice and fresh cream into the blender jar.

Add the ice cubes.

Mix at speed 1 for 15 seconds and Smooth at speed 2 for 15 seconds. Serve immediately.

### **Tropical ginger**

475ml ginger beer

45ml rum

350g mixture frozen pineapple+melon+mango

Makes 2-3 glasses

Place the ginger beer and rum into the blender jar.

Add the frozen fruit.

Mix at speed 1 for 15 seconds and Smooth at speed 2 for 30 seconds. Serve immediately.