

ELECTRIC BLENDER & SOUP MAKER

Instruction manual

TBLC-951



TBLC-956



Dear consumer,
Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.
If you pass the device on to a third party, these Operating Instructions must also be handed over.
Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage or injury caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children
- Regarding the instructions for cleaning surfaces in contact with food or oil, please refer to the below paragraph "cleaning and maintenance" in manual.
- Regarding the instructions for the use of accessories, operation times and speed settings, please refer to the below paragraphs.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning
- This device is not a toy, do not leave children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.

- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.

- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- This appliance is only intended for household use.

SPECIAL WARNING FOR BLENDER

- Switch off the appliance and disconnect from supply before changing accessories approaching parts that move in use.
 - Potential injuries can occur with misuse. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning, as they are extremely sharp.
 - Regarding the instructions for cleaning surfaces in contact with food or oil, please refer to the below paragraph "cleaning and maintenance" in manual.
 - Regarding the instructions for the use of accessories, operation times and speed settings, refer to the below paragraphs.
 - The blades are sharp. Take all necessary precautions.
 - To mix liquids, especially hot liquids, it is advisable to proceed in small quantities, at the same time, to avoid overflowing. Never fill above half of the bowl.
 - Do not leave cooking utensils in the container during mixing and even only when the appliance is not in use.
 - Never use products or liquids hotter than 80 ° C (or 127 ° F)
 - After a maximum of 3 minutes, the blender should cool for at least one minute to avoid overheating.
 - Repairs must only be carried out by an authorized repairer.
- THIS PRODUCT IS INTENDED FOR PRIVATE HOUSE USE ONLY.**

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

Do not immerse the device in water or any other liquid.

Place the machine on a suitable flat, stable surface.

TO KNOW THE APPLIANCE

- 1 Lid
- 2 Jug
- 3 Stainless Steel Knife
- 4 Hot Plate
- 5 Base
- 6 Handle
- 7 Blending Button
- 8 Timer



The blades of the soup maker can be used solely as a blender to make smoothies, purees, dips and dressings ...

The soup maker is fitted with several safety features

- A sensor on the lid.
- A sensor for the minimum level of liquid.
- A heat sensor for safe use.
- Cut-off safety on the motor base. (if the bowl is not properly engaged).

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

Warning : the bowl contains very sharp and sharp blades, it must be handled with care.

Place the unit on a stable, heat-resistant surface.

Carefully place the carafe on its base while aligning the safety points.

- Connections between the base of the handle and the base unit.

The bowl of the blender should be properly seated in its location on the base.

- Place the lid on the heating blender by aligning the lid lock with the bowl handle, and push down on the lid (with a little force) until you hear a locking "click".

When everything is properly assembled, connect the unit to the main power supply and press the mix button (7) to test.

Note: If the blender starts, it means that the assembly of parts is well done.

Remove the cover.

Put some water and ingredients in the bowl.

Note: Not less than the minimum level and not more than the maximum level.

Close the lid, place the bowl on the base.

Set the timer to the desired cooking time.

the blue indicator light will come on, and the blender will begin to heat up.

When the mixture is hot, press the Blender button (7) to mix the ingredients, release the button when the mixture is sufficient. This will stop the blender.

Wait for the cutting blade to stop completely before removing the cover to avoid splashing.

1. making soup

chop all your ingredients into approximately 2-3cm cubes and add to the soup maker jug.

Notes : it is not recommended to use uncooked meat or fish in the soup maker.

Any meat or fish used in this soup maker must be precooked.

Do not add any frozen ingredients.

All ingredients must be room temperature.

It is possible to add, in place of water, juice or broth or other edible liquid.
All liquids used must also be at room temperature.

Make sure the total volume of ingredients added is above the minimum but not more than 1700ml,

*Notes : the internal sensor near the base of the jug must be covered with liquid.
Under filling the soup maker jug will result in the alarm sounding and the unit fail to operate,*

Should the boiling action during cooking cause the contents to reach the lid, the upper sensor will switch off the heating function to help prevent boiling over.

Avoid starch and sugar. They can burn the bottom of the blender bowl.

Any interruption will result in the cancellation of the program, the restart will result in the cooking steps already performed that may affect the final recipe.

The cooking time must be maximum 25 to 30 minutes.

To completely stop the program, just set the timer to “zero”.

Note : Once the cooking is finished, the pilot indicator will light off and an audible sound will be eared.

After cooking, mix the ingredients by pressing the blender button (7).
Press longer to obtain a velvety.

WARNING

Be careful when opening the lid because it will be hot.

Steam can also be released.

Never touch the surface of the lid because it is very hot after use.

Always use the small handle provided for this purpose.

1. Rotate the lid by pressing counter-clockwise the small handle.

2. Hold the handle of the blender with one hand and remove the lid with the small handle with the other hand.

Example on the right :



2. Reheating

Previously prepared soup that has gone cold can be reheated in the soup maker. Set the timer time according to your wish.

3. Blending

The heated Blender is also a traditional Blender.

Just assemble the device, add the ingredients and mix.

Notes : It is important that the ingredients reach the minimum level in the bowl, but does not exceed the maximum level.

It is impossible to grind the dry ingredients. The sensor will not accept it.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher (except elements with connector).

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

Do not clean the soup maker in dish washer.

Always disconnect the soup maker before cleaning.

Do not immerse the soup maker in water or any liquids.

Rinse the lid in warm, soupy water.

To clean the inside of the jug, rinse to remove any soup or large food particles. Remove any food remains using a soft cloth and mild detergent before rinsing again.

Caution: the blades in the jug are very sharp and removable, extreme caution shall be taken when cleaning the inside of the jug.

Tip for Cleaning the jug.

Pour 800ml of water, press the blending button to clean the jug, release the button to stop the process.

Change the water and start again if necessary.

Trouble shooting

| Problems | Solutions |
|---|---|
| The unit is not working and beeping | <ol style="list-style-type: none">1. the jug is not fitted to the base well.2. the lid is not locked well.3. there is no enough liquid in the jug.4. there are spills around overflow-sensor |
| The unit has stopped in the middle of cooking | <ol style="list-style-type: none">1. the lid is loose2. liquid becomes too low3. liquid is too much than the maximum sensor level.4. the jug is loose connect to the base. |
| Food is not blended | <ol style="list-style-type: none">1. pieces were too large.2. food was not boiled before blending.3. too much water. |
| Food was not cooked well | <ol style="list-style-type: none">1. chop the food into smaller pieces before adding.2. some food required longer cooking time |
| Soup is not boiled | Too much soup, the liquid reaches the maximum sensor and heating stopped |
| Food is burnt and stuck to the bottom | <ol style="list-style-type: none">1. caused by high sugar, starch; use proper sugar, starch.2. too much food and too little liquids. |

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are:

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or,

replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase. The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay! In the event of foreign intervention, the guarantee becomes null and void. After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

| | |
|--------------|-------------------|
| Power supply | 220-240V~ 50/60Hz |
| Power | 900-1100W |
| Timer | 60 Minutes |
| Capacity | 1,5L |
| Norm | Class I |

Made in PRC

The characteristics can change without prior notice.


This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note : In the event of question concerning the earth or electric connection, please consult a qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

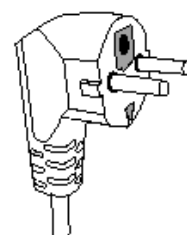

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**