

ELECTRIC BLENDER **Instruction manual**



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ The device is intended for use in domestic and similar applications such as:
 - Kitchen work area in shops, offices and other work environments.
 - Farms.
 - By customers of hotels, motels and other residential environments.
 - Bed and breakfast type environments.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage or injury caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- ❑ Children shall not play with the appliance.

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Cleaning and user maintenance shall not be made by children without supervision.
- Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "CLEANING AND MAINTENANCE" in manual.
- Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
WARNING: Potential risk of injuries from misuse.
Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- This device is not a toy, do not leave children or people with disabilities to play with.
- In order to ensure your children 's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.

- ❑ Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- ❑ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.

- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.
- The appliance must be used and rested on a table or flat & stable surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- This appliance is only intended for household use.

SPECIAL WARNING FOR BLENDER

- The blades are sharp. Take all necessary precautions.
 - To mix liquids, especially hot liquids, it is advisable to proceed in small quantities, at the same time, to avoid overflowing. Never fill above half of the bowl.
 - Do not leave cooking utensils in the container during mixing and even only when the appliance is not in use.
 - Never use products or liquids hotter than 80 ° C (or 127 ° F)
 - After a maximum of 2 minute continuously, the blender should cool for at least one minute to avoid overheating. After 2 cycles, allow the blender to rest for at least 5 minutes before re-use.
 - Repairs must only be carried out by an authorized repairer.
- THIS PRODUCT IS INTENDED FOR PRIVATE HOUSE USE ONLY.**

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.




The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the

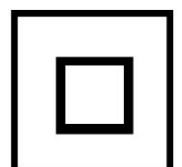

mass of a protective conductor grounded. The materials are said : double insulation class II.

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



The symbol " CMIM " is the guarantee of compliance with optional harmonized Moroccan Standards, which reflect the essential requirements in terms of technical specifications. These standards are not mandatory but ensuring compliance with the essential requirements.



For more information :

<http://www.quefairedemesdechets.fr>

CLEANING AND MAINTENANCE

Before cleaning, always: switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, fork, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

TO KNOW IT'S UNIT

1. Measuring cup
2. Lid
3. Handle
4. Glass Jar
5. Blades with Stainless Steel knives
6. Speed control selector
7. Motor base
8. Anti-slide feet



USE

- Unwind the power cord completely.
- Check that the voltage in force in the country where you are, corresponds to that indicated on the device.
- Connect the appliance into an outlet in good condition (earthed if the appliance is class I), to avoid any danger.
- Disconnect the power cable from the electrical network before any maintenance cleaning and fitting of accessories.
- Never modify the device.
- Fill half of the bowl with hot soapy water. Wash the interior with a sponge or clean cloth.
- Empty the water and rinse thoroughly.
- Dry the bowl, taking all the necessary precautions.

Note : Be very careful because the blades are sharp and can cause serious injuries.

1. Hold the bowl by the handle and place it on the base.
2. Place the food to be ground in the bowl.
3. Place the lid on the bowl and press for the whole is airtight
4. Place the filler cap in the centre of the cover.
5. Turn the speed selector to speed 1 for 5 to 10 seconds. If necessary, increase the speed until 2 or select P for pulse function.
6. Let the blender run for 30 seconds.
7. Return the selector to 0 and unplug the appliance.
8. Remove the lid to pour the mixture into a suitable container.
9. Thoroughly, rinse all parts and allow them to dry.

Notes : At any time, To turn off, turn selector to 0.

To insert additional liquid or ingredient, stop the blender, remove the Measuring cup and fill with the desired product.

Close the dosing cap and resume the operation after having reconnected the device.

To prolong the life of the product, do not operate the blender more than 30 seconds continuously.

After this time, the blender must cool for at least one minute to avoid overheating.

After 2 cycles, allow the blender to cool for at least 5 minutes before using it again.

Warning : never put your hands or other objects in the bowl while the blender is running; this could lead to serious injury and damage to the mixer.

IMPORTANT INSTRUCTIONS FOR USE

- Never fill with liquids or very hot food in the blender. (Always below 70°C) It could damage it.
- Always pour the solid ingredients into the bowl first, operate, then add the liquids.
- The blender is not suitable for:
 - o Beat the egg white
 - o Whip Cream
 - o Make mashed potatoes
 - o Chop meat
 - o Mix dough
- Never place bones, large pieces of solid food, hard food such as whole turnips in the blender, as this may damage the appliance.
- When crushing the ice cubes, do not overload the bowl of the blender.
- To add ice cubes to crush, remove the filling cap and add them one by one.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE IN ACCORDANCE WITH REGULATIONS

Before being delivered, all our products are subjected to rigorous checks. This device is guaranteed for 24 months from the date of purchase of the product by the consumer.

The warranty documents are:

- the invoice and
- the warranty certificate (located on the side or the bottom of the box) stamped and completed.

Without these supporting documents, no free replacement or free repair can be made.

During the warranty period, we take charge, free of charge, for defects in the device or accessories, resulting from a defect in materials or workmanship by repair or replacement.

Services under the legal guarantee do not entail any extension of the guarantee period and do not give the right to a new guarantee.

In the event of a warranty claim, return the complete device to your dealer, in its original packaging, accompanied by proof of purchase.

The breakage of glass or plastic parts is, in all cases, your responsibility.

Wearing parts (for example: motor brushes, hooks, drive belts, spare remote control, spare toothbrushes, saw blades etc.) as well as their cleaning, maintenance or replacement, are not guaranteed. , and are therefore at your expense.

In the event of foreign intervention, the guarantee lapses.

After expiry of the warranty period, repairs can be carried out, against payment, by a specialist dealer or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50/60Hz
Power	1250W
Norm	Class II
Using Time	30 Seconds continuously
	Made in PRC

The characteristics can change without prior notice.

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

NOVEMBER 2024