

### ELECTRIC BLENDER

#### Instruction manual



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.



If you pass the device on to a third party, these Operating Instructions must also be handed over.  
Please keep them for future references.

## **IMPORTANT SAFEGUARDS**

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
  - staff kitchen areas, in shops, offices and other working environments;
  - by clients in hotels, motels and other residential type environments;
  - Environment type like :
    - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage or injury caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children
- Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "CLEANING AND MAINTENANCE" in manual.
- Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning
- This device is not a toy, do not leave children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :  
**THERE IS A DANGER OF SUFFOCATION !**
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning or maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.

- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Never wind the cord around the appliance and do not bend it
- Ensure that the power cord does not come into contact with hot parts of this unit.
- Make sure the appliance has cooled down before cleaning and storing it.
- The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- Before cleaning, always unplug the appliance from the power supply and let it cool down.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Always remove the plug from the wall socket when the appliance is not in use.
- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.
- The appliance must be used and rested on a table or flat & stable surface.

- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- This appliance is only intended for household use.

## SPECIAL WARNING FOR BLENDER

- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Potential injuries can occur with misuse. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning, as they are extremely sharp.
- Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph " CLEANING AND MAINTENANCE " in manual.
- Regarding the instructions for the use of accessories, operation times and speed settings, refer to the below paragraphs.
- The blades are sharp. Take all necessary precautions.
- To mix liquids, especially hot liquids, it is advisable to proceed in small quantities, at the same time, to avoid overflowing. Never fill above half of the bowl.
- Do not leave cooking utensils in the container during mixing and even only when the appliance is not in use.
- Never use products or liquids hotter than 80 ° C (or 127 ° F)
- After a maximum of 2 minute continuously, the blender should cool for at least one minute to avoid overheating. After 2 cycles, allow the blender to rest for at least 10 minutes before reuse.
- Repairs must only be carried out by an authorized repairer.  
**THIS PRODUCT IS INTENDED FOR PRIVATE HOUSE USE ONLY.**

## GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate



collection (eg recycling bin, waste, voluntary intake point).

For more information : <http://www.quefairedemesdechets.fr>

## FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

## TO KNOW IT'S UNIT

1. Measuring cup
2. Lid
3. Glass jar
4. Handle
5. 8 blades Stainless Steel knives
6. Blade base
7. Function buttons
8. Speed control knob + Pulse in middle of knob
9. Motor base
10. Anti-slide feet



## USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning or maintenance and accessories assembly.
- Never modify the appliance in anyway.

## FUNCTION

Knob	Manually Operation, middle circle is Pulse function
Function buttons	Include Ice crush (Glace pilée), Auto clean (Auto Nettoyan), Smoothie
On/off	“0” is the off state.
Blending	The blender is with variable speed control by showing min to max marks around the knob.

To extend product lifetime, it is recommended to run the blender for no more than 2 minutes when blending on the high speed, then the blender should cool for at least one minute to avoid overheating.

After 2 cycles, Allow the blender to rest for at least 10 minutes before reuse.

1. Fill the jar halfway with warm, soapy water (**be careful when washing inside the jar as the blades are very sharp**). Do not immerse the motor unit in water or any other liquid.
2. Wipe the motor unit with a slightly dampened soft cloth.
3. Hold the jar by the handle, and lower it onto the motor.
4. Twist the jar clockwise until it locates and locks on the motor unit.

**Important:** The motor unit will not work unless the jar is correctly fitted.

5. Place the lid on top of the jar and press down until the lid sits on the rim of the jar.
6. Refit the filler cap back in the lid, ensuring the small projection on both sides of the filler cap locate in the slots in the lid, and turn filler cap anti-clockwise until tight.

7. Switch speed control knob to the low level 1 for 5-10 seconds.
8. Turn the speed control to the max speed and allow the blender to run for 30 seconds.
9. Rinse all parts thoroughly and allow them to dry completely.

## OPERATION

**Warning:** Do not put hands or other objects into the jar while the blender is operating; doing so may result in serious injury and may damage the blender.

- Connect the plug with the power, the unit with the blue light flash one time.
- Then turn the knob clockwise one level, the unit comes into the standby mode.
- Under the standby mode, you can do below operations:
  1. Choose any one button from the 3 preset buttons on the left side, then the chosen preset program will work automatically, after finish, it will stop and back into the standby mode. If need to stop the working process, press the selected button again.
  2. Do not choose any preset buttons, directly turn the speed knob from min to max to blend. The variable speed control makes your blending optionally. Once finish blending, turn back the knob to “o”, then it comes back to standby mode.
  3. Press the middle circle on the control knob to reach the pulse function any time. Once the finger loose from the knob, it goes back to standby mode.
- Once the preset button is chosen, during its working time, the speed knob can not work.
- Once the speed knob is working in the blending process, the preset buttons can not work.
- During all the working process, the related blue light is on.
- To stop the working process,

**IMPORTANT:** Switch off the mains supply and remove the mains plug from the mains supply when the blender is not in use.

### **IMPORTANT OPERATION TIPS**

- Never use hot liquids or hot food in the blender. Doing so could seriously harm the operator and or third parties.
- It is advisable to pour the solids into the jar first, then add the liquids.
- The blender is not suitable for beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough or extracting juice from fruits and vegetable.
- Never put bones, large pieces of solid food, tough foods such as turnips in the blender as these may cause damage.
- When crushing ice cubes do not overload the blender. When adding ice cubes use the filler cap and add them one at a time.

#### **Built-in safety lock**

This feature ensure that you can only switch on the appliance if the blender jar, the mill or chopper beaker is assembled on the motor unit properly. If the blender jar, the mill or chopper beaker is correctly assembled, the built-in safety lock will be unlocked.

### **CLEANING AND MAINTENANCE**

Before cleaning, always: switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, fork, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher. Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

- Do not touch the blades as they are very sharp, handle carefully.
- Before cleaning the blender, remove the mains plug from the mains supply and allow the blender to cool down.
- Do not immerse the motor unit in water or any other liquid.

- Avoid the use of solvents, polish, abrasive or aerosol cleaners as they may damage the surface of the blender. Clean the exterior by wiping with a slightly dampened soft cloth.
- Always wash immediately after use for easier cleaning. Don't let food dry inside the jar or on the blades as this will make cleaning more difficult.
- Pour a little warm soapy water into the jar and press the "P" function for a few seconds. Empty the jar. Repeat if necessary to remove most of the food residues.
- Wash the inside of the jar and the blade with a brush. Don't touch the blade as they are very sharp, handle carefully.
- Wash the lid and filler cap in warm soapy water.
- Leave items to dry in a safe place well away from any children before re-assembly.

## **STORAGE**

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

## **GUARANTEE**

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee !

In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement,

webs etc) as well as cleaning, maintenance or its replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

## SPECIFICATIONS

Power supply	220-240V~ 50/60Hz
Power	1500W
Norm	Class I
Capacity	1,5L
Using Time	BLENDER KB: 2min

Made in PRC

*The characteristics can change without prior notice.*

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

**Imported by Sotech International  
" LE PERIPOLE " N°A-107  
33, Avenue du Marechal de Lattre de Tassigny  
94120 Fontenay sous-Bois - France**