

### DUO ELECTRIQUE COFFEE MACHINE

#### Instruction manual



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

## IMPORTANT SAFEGUARDS

- Warning: risk of potential injury from misuse.
- The heating element surface is subject to residual heat after use
- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
  - staff kitchen areas, in shops, offices and other working environments;
  - By clients in hotels, motels and other residential type environments;
  - Environment type like :
    - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction

concerning use of the appliance in a safe way and if they understand the hazards involved.

- This device is not a toy, do not leave children or people with disabilities to play with.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years of age.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- **WARNING:** The filling aperture must not be opened during use
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- **Caution ! Do not allow small children to play with the foil :**  
**THERE IS A DANGER OF SUFFOCATION !**
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- If the supply cord or appliance is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.

- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.

- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.
- ❑ This appliance is only intended for household use.

(\*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

## GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



The symbol "CMIM marking" is the guarantee of compliance with the harmonized Moroccan Standards, optional, which translate the essential requirements into technical specifications. These standards are not mandatory but guarantee compliance with the essential requirements. For more information : <http://www.quefairedemesdechets.fr>



## **CLEANING AND MAINTENANCE**

Always unplug the appliance and allow it to cool before cleaning

Clean the outside of the appliance with a slightly damp sponge or cloth.

The (removable) parts in contact with food such as : Bowl, Cup, Spoon, Spatula etc. can be cleaned in hot water with a sponge and washing-up liquid or washed in the dishwasher.


Never immerse the device in water or any other liquid !

Never use abrasive products, a wire brush or any other sharp object.

Wash the filter basket in hot soapy water.

Do not place other parts of your coffee machine in the dishwasher.

### TO KNOW ITS UNIT

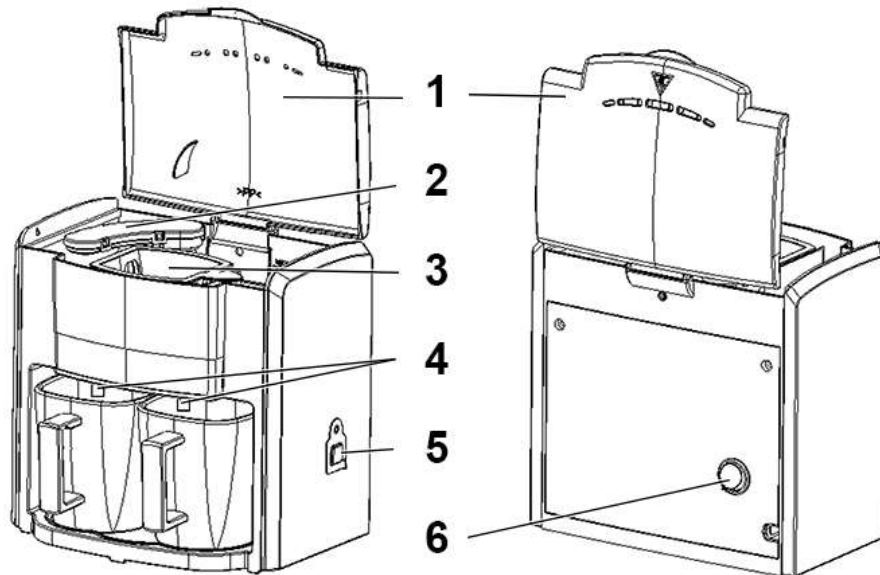

- 1. Water tank cover
- 2. Water diffuser
- 3. Filter

- 4. Pouring spout
- 5. Turn on switch
- 6. Power switch

### USE

Completely unwind the power cord.

Check that the voltage in force in the country where you are, corresponds to that indicated on the device.

Plug the device into a socket in good condition (earthed if the device is class I), to avoid any danger.

Disconnect the power cable from the electrical network before any cleaning, maintenance and fitting of accessories operation.

Do not modify the device in any way.

### FIRST USE

Before using for the first time, remove the device and all accessories carefully.

Clean all accessories and bowls with soapy water and dry thoroughly.

To ensure excellent coffee, the best is to rinse the machine with hot water as follows:

Open the cover

Pour some water into the tank. (Without exceeding the maximum level nor putting coffee in the filter)

Close the tank cover.

Place a large mug in the coffee maker.

Connect the device.

Press the power switch. (On the back of the device).

*Note: the indicator light comes on to confirm that the coffee maker is on voltage.*

Press the Turn on switch (on the side). The indicator light comes on.

The Coffee maker begins to heat up. When the water is hot, it passes through the filter and fills the container.

When the cycle is complete, the indicator light will go out and the device will no longer heat up, however, the power switch remains on and the device is still powered on.

To brew one or two more cups of coffee, wait for the indicator light to go out and repeat the brewing procedure.

Caution : Attempt to start another brew cycle before the coffee maker cools down and the indicator light is off, may cause an incomplete cycle. As the device is equipped with a switch thermal, to avoid overheating, it can stop.

*Notes : the coffee maker Turn on button is a thermally controlled activation switch. That's why he stops when the device has run out of water and has cooled down.*

*To interrupt an infusion cycle, position the power switch to 0.*

*When the device is plugged in for the first time, the pilot indicator lights up. => Wait about 30 seconds for it to switch off. It is then possible to use the coffee maker.*

*When the coffee machine is not used for a long time, set the power switch to 0.*

*Before starting the appliance to prepare a cup of coffee, always make sure the correct amount of water is poured for the cup being used. If the level is too high there is a risk of overflow.*

*Also make sure that the cup is large enough that both pourers flow inside the mug. (Or, put 2 cups).*

*For proper use, empty and clean the filter after each use.*

*Carefully remove the filter when it is hot.*

### **Tips for a tasty coffee**

- Always use fresh, cold water.
- For stronger or milder coffee, increase or decrease the amount of ground coffee according to your taste.
- Finer coffee grinds promote full flavour extraction and result in a rich, full-bodied coffee.



- Store ground coffee in an airtight container, protected from light and in a cool, dry place. It can be stored in the refrigerator to maintain its freshness.
- For the best coffee taste, buy coffee beans and grind them finely just before brewing.
- Do not reuse coffee grounds, this considerably reduces the flavour of the coffee.
- Reheating the coffee is also not recommended as the coffee becomes bitter and tastes bad.
- A clean coffee maker is essential for brewing great-tasting coffee. Clean it regularly as specified in the “Care and maintenance” section.

## **CLEANING AND DECALCIFICATION**

The hardness of drinking water varies by region. Lime particles settle in the water as residues in the machine and can block the hoses and cause malfunction or damage. To avoid this, be sure to decalcify the machine after 300 to 400 uses, or, after one or two months or, in any case, if the flow drops significantly.

Decalcification must be done correctly to avoid damage. It is therefore essential to follow these instructions.

- Never clean the machine with vinegar. This causes damage and can make your coffee taste unpleasant.
- Damage caused by improper decalcification or lack of decalcification is not covered by warranty.
- Buy a commercial descaler (or decalcification liquid). Dilute it according to the manufacturer's instructions and pour the mixture into the water tank.
- Place a large bowl under the distribution heads to collect the mixture and the scale and lime residues.
- Fill the tank with the mixture.

*Note : Make sure the solution is completely dissolved.*

- Press the coffee maker Turn on switch (on the side) to circulate the descaling liquid in the coffee maker. Repeat the operation two or three times.
- To rinse the internal circuit, repeat the operation with fresh water (without descaling solution).

## **STORAGE**

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

## GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee !

In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void. After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

## SPECIFICATIONS

Power supply	220-240V~ 50-60Hz
Power	420-500W
Norm	Class I

Made in PRC


*The characteristics can change without prior notice.*

## EARTHING

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

*Note : In the event of question concerning the earth or electric connection, please consult a qualified personnel.*

*In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.*

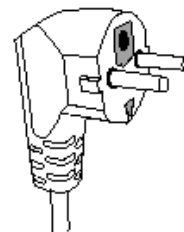

**CAUTION:** In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

**Imported by SoTech International  
" LE PERIPOLE " N°A107  
33, Avenue du Marechal de Lattre de Tassigny  
94120 Fontenay sous-bois - France**