

ELECTRIC JUICER INSTRUCTION MANUAL



TCFI-1050



TCFI-1055



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance shall not be used by children.
- ❑ This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- ☐ Keep the appliance and its cord out of reach of children.
- ☐ Children shall not play with the appliance.
- ☐ This device is not a toy, do not leave small children or people with disabilities to play with.
- ☐ In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- ☐ Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- ☐ From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- ☐ Never immerse the appliance in water or any other liquid for any reason whatsoever.
- ☐ Never place it into the dishwasher.
- ☐ Never use the appliance near hot surfaces.
- ☐ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ☐ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ☐ Never use the appliance outside and always place it in a dry environment.
- ☐ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ☐ Never use any other connector than the one provided.
- ☐ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ☐ Never wind the cord around the appliance and do not bend it
- ☐ Ensure that the power cord does not come into contact with hot parts of this unit.
- ☐ Make sure the appliance has cooled down before cleaning and storing it.

- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ This appliance is only intended for household use.
- ❑ Do not use the appliance if rotating sieve is damaged.
- ❑ Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- ❑ Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning and maintenance" in manual.
- Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.

SPECIAL WARNING FOR THIS APPLIANCE

- Always unplug the appliance from the power supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the unit and disconnect it from the power supply before changing accessories or approaching parts that are movable during operation.
- Potential injuries may occur during misuse. Precautions should be taken when handling, emptying the bowl and during cleaning.
- Do not use the appliance if the rotating filter is damaged
- For details on how to clean surfaces that come into contact with food, speed and time settings, refer to the following paragraph in this manual.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.




The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

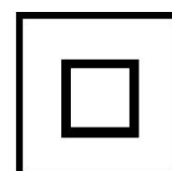

The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

TO KNOW IT'S UNIT

1. Pusher
2. Pulp collector tray
3. Motor Base
4. locking mechanism
5. Pour Spout
6. Colander Support
7. Stainless Colander
8. Power cord and electrical outlet
9. Transparent Funnel
10. Cover
11. On / Off and speed selector



FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean outside and inside of the machine cabinet with a damp cloth and wipe dry.

ASSEMBLY

- Place the motor base on a flat surface, such as a work surface in a kitchen, and ensure that the unit is stable.
- Place the strainer holder on the motor base so that the spout fits into the slot on the side of the motor base.
- Place the fruit pulp tray so that it locks firmly on the foot of the unit.
- Carefully, Lock stainless strainer on its support.
- Do not touch the sharp and aggressive parts in the bottom of the strainer.
- Ensure that the support of the strainer is properly positioned on the base, so that the gear axis is engaged in the support.
- Ensure that the strainer rotates uniformly.
- Place the lid on the device so that it covers both the pulp bin and centrifuge.
- Ensure that the cover is adjusted on the base.
- Raise the locking mechanism in a vertical position and ensure that it engages on the lid and blocks.

Note: The locking mechanism makes a clicking sound when properly positioned.

- Place the glass provided, a suitable bowl or other container under the spout.
- The device is ready for use.

USE

- Unroll the power cord completely.
 - Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.
 - Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
 - Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
 - Never modify the appliance in anyway.
 - Always disconnect from power supply if it is left unattended and before assembling, disassembling or during cleaning.
 - Stop the machine and disconnect it from the power supply before changing accessories or approaching parts that are mobile during operation.
 - Potential injuries can occur with misuse. Care shall be taken when handling, emptying the bowl and during cleaning.
 - Regarding the instructions for operating time and cleaning, refer to the corresponding section of the manual.
-
- Switch on the unit by turning the selector to position "1" (low speed) or "2" position (high speed).
 - Speed 1 is adapted tender fruit and vegetables.
 - Speed 2 is adapted to extract the toughest fruit and vegetable juices.
 - Insert the fruits and / or vegetables selected in the device into the funnel.

Gradually, by pushing them down, if necessary, using the pusher.

Note: Make sure that you turn the tamper so that the groove in the tamper fits into the funnel properly.

- The long vegetables, such as carrots, must be introduced with the pointed end first, into the funnel.
- Press Gently on fruits and / or vegetables with the pusher. Too much pressure reduces the amount of extracted juice and can damage the unit.
- Keep an eye on the pulp bin and container for juice, and stop the machine before they are too full.
- Always stop the machine by turning the selector lever to position "0" before lifting the lid.
- Do not let the appliance run for more than three minutes continuously. If the unit has been running for three minutes, allow to cool for 7 minutes before using it again.

SPEED SELECTOR

Position 0 To stop the machine.

Speed 1 low speed, applicable for soft fruits and vegetables, such as melon, watermelon, tomato, cucumber strawberries, raspberries etc.

Speed 2 High Speed, applicable to extract the juice from all fruits and vegetables. (See description in relation to the speed.)

This product is equipped with a safety, and it will work if, and only if, the installation is quite correct.

Fruit Selection

Select fresh fruits and vegetables containing much juice.

Suitable fruits :

1. pineapple, beetroot, celery stick, apple, cucumber, spinach, melon, tomato, mandarin orange and grape etc.

NOTE : Fruits and vegetables with thin skin are not required to peel.

Those with thick one such as mandarin orange, pineapple and raw beetroot.

Citrus fruits' seeds, which may cause bitter taste to juice, shall be removed.

In squeezing apples, concentration of apple juice depends on the type of apple you selected.

clear juice can also be squeezed out from apples with much juice, you can select the type of apple to be squeezed according to your needs or to your test.

The freshly-squeezed apple juice, which may turn to brown quickly,

- can be added several drops of lemon juice to slow down discolour.

Leaves and stems (such as lettuce) can be put into food processor for juicing.

The fruits containing starch such as banana, papaya, avocado, figs and mango are not suitable to be put into food processor to make juice, but they can be processed with the mixing function of food processor.

CLEANING AND MAINTENANCE

Before cleaning, always: switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place and out of reach from children.

Nutrition constituent of common fruits and vegetable

| Fruits/Vegetables | Vitamin/Mineral substance | KJ/Calorie | Gear Selection |
|--------------------|--|-------------------------|----------------|
| Apple | Vitamin C | 200g=150 KJ(72 calorie) | 2 |
| Apricot | Rich in DF, containing potassium. | 30g=85KJ(20 calorie) | 1 |
| Beet | Source of folic acid, DF, vitamin C and potassium. | 160g=190KJ(45 calorie) | 2 |
| Blueberry | Vitamin C | 125g=295KJ(70 calorie) | 1 |
| Brussel Sprouts | Vitamin C, B, B6, E, folic acid and DF. | 100g=110KJ(26 calorie) | 1 |
| Cabbage | Vitamin C, folic acid, potassium, B6 and DF. | 100g=110KJ(26 calorie) | 2 |
| Carrot | Vitamin A, C, B6, E and DF. | 120g=125KJ(30 calorie) | 2 |
| Celery | Vitamin C and potassium | 80g=55KJ(7 calorie) | 2 |
| Cucumber | Vitamin C | 280g=120KJ(29 calorie) | 1 |
| Fennel | Vitamin C and DF. | 300g=145KJ(35calorie) | 1 |
| Grape | Vitamin C, B6, and DF. | 125g=355KJ(85calorie) | 1 |
| Chinese gooseberry | Vitamin C and potassium | 100g=100KJ(40calorie) | 1 |
| Melon | Vitamin C, folic acid, DF and vitamin A | 200g=210KJ(50calorie) | 1 |
| Nectarine | Vitamin C, B3, potassium and DF. | 180g=355KJ(85calorie) | 2 |
| Peach | Vitamin C, B3, potassium and DF. | 150g=205KJ(49calorie) | 2 |
| Pear | DF | 150g=250KJ(60calorie) | 2 |
| Pineapple | Vitamin C | 150g=245KJ(59calorie) | 2 |
| Raspberry | Vitamin C, iron, potassium and magnesium | 125g=130KJ(31calorie) | 1 |
| Potato | Vitamin C, DF, vitamin E, folic acid and vitamin A | 100g=90KJ(22calorie) | 1 |

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumerconsumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or,

replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase. The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay ! In the event of foreign intervention, the guarantee becomes null and void. After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

| | |
|--------------------------------------|-------------------|
| Power supply | 220-240V~ 50/60Hz |
| Power | 1000W |
| Norm | Class II |
| Continuous operating time of juicing | 3 minutes |
| Spacing Interval | 7 minutes |

The characteristics can change without prior notice

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous Bois - France**