

### FAN - HEATER

### INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

This product is only suitable for well insulated spaces or occasional use.

## IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
  - staff kitchen areas, in shops, offices and other working environments;
  - By clients in hotels, motels and other residential type environments;
  - Environment type like :
    - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if

they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- The heating appliance must not be placed just below an electrical outlet.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly. Also do not put anything on it.
- WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

- **WARNING:** In order to avoid overheating, do not cover the heater.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :  
**THERE IS A DANGER OF SUFFOCATION !**
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Never wind the cord around the appliance and do not bend it
- Ensure that the power cord does not come into contact with hot parts of this unit.

- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ Always place the unit on a flat surface.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.
- ❑ This appliance is only intended for household use.

(\*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

## **SAFETY INSTRUCTIONS (to be read before operating the heater)**

1. Do not use the heater unless the feet are correctly attached.
2. Indoor use only.
3. Do not place the heater on carpets having a very deep pile.
4. Always unplug the heater when moving it from one location to another.

## **GENERAL INFORMATION**

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.




The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous



substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

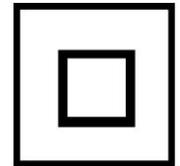

The symbol "TUB / SHOWER" crossed out means to never use the unit in a bathroom, a shower in or near water spray. (IP20 Minimum distance 3M.)



The symbol "HOT WALL" warns the user that the walls of the unit can become very hot, and to take precautions as required.




The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).




For more information : <http://www.quefairedemesdechets.fr>

CAUTION : To avoid overheating, do not cover the unit and do not put anything on it.

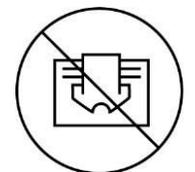

## FEATURES

1. CARRY HANDLE
2. REAR AIR ENTRY
3. FRONT OUT AIR GRID
4. HOUSING
5. SELECTOR 0 / COLD / 1000W / 2000W
6. SAFETY TIP OVER SWITCH
7. PILOT LAMP
8. ADJUSTABLE THERMOSTAT

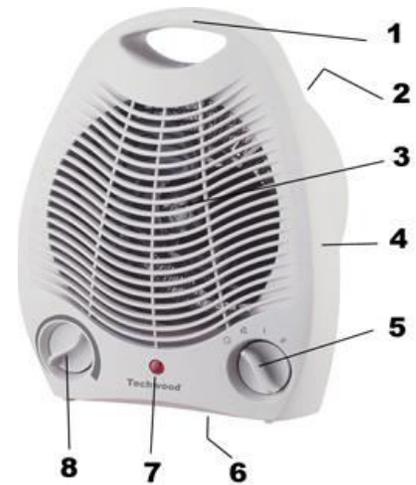

## USE

- Unroll the power cord completely.
  - Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
  - Connect the apparatus in a socket-outlet in good state, to avoid any danger.
  - Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
  - Stand the appliance on a table or flat surface.
1. Turn switch to the “O” position (see picture).
  2. Plug in the appliance, and turn the heat select switch to choose cold air or warm air and the temperature of warm air as below.
  3. With the thermostat knob, select the desired room temperature.
  4. Note: We recommend to turn the thermostat button on half possibilities and complete the setting after a while.
  5. After use, Turn the dial to "0"
  6. Disconnect the appliance by removing the plug from the wall outlet. (Never pull the cord or on the unit).
  7. While working the indicator light will be on.
- ☞ Turn the switch to “☞” position, the heater blows cool air.
1. Turn the switch to “I” position, the heater blows warm air, working at 1000W.
  2. Turn the switch to “II” position, the heater blows warm air, working at 2000W.
  3. Turn the switch to “O” position, the heater stops working, the indicator light will be off.

## VERY IMPORTANT

### **Tip over switch Security System**

When the fan heater turn over, the tip over switch will cut out automatically  
Put again the Fan heater in vertical position to restart working.

## **Thermal Security**

1. To avoid risk to human being or damage to internal components, the fan heater has a security system which will automatically switch off the appliance if the heat reaches the safety limit.
2. If overheating occurs:
  - Turn the switch to “O” position, and remove the plug from the socket.
  - Check if the air flows smoothly before the outlet and inlet, and if the appliance is put in right position. If so, get it in order before restart the appliance.
  - Let the fan heater cool down for 8 to 10 minutes before you start it again.
  - Plug in the appliance and switch it on.

Note : If the appliance cannot operate normally, remove the plug immediately from the socket and have the fan heater serviced by an appointed service only.

## **CLEANING AND MAINTENANCE**

1. Before cleaning the appliance, turn off the heater first, then remove the plug from the socket, and wait until the appliance cools down.
2. Clean the air inlet and air outlet of the appliance regularly (at least twice a year normally even with vacuum cleaner).
3. Use a damp cloth to clean the surface of appliance, avoid water going inside the appliance, dry the appliance before use or store.

## **STORAGE**

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

## **GUARANTEE**

Before being delivered, all our products are subjected to a rigorous control.  
This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

## **SPECIFICATIONS**

Power supply	220-240V~ 50/60Hz
Power	1800-2000W
Norm	Class II

Made in PRC

*The characteristics can change without preliminary preventing*

- This appliance does not have any protection against the risk of falling water. It should therefore be placed away from any water source (shower, bathtub, faucet, ...) and is not suitable for a bathroom.
- The electrical installation of the room, the installation of the appliance and its use must comply with the standards in force in the country of use. (NFC15100 for France)

For additional protection, the installation of a residual current device with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the unit. Ask your installer for advice.

**CAUTION:** In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International  
" LE PERIPOLE " N° A107  
33, Avenue du Marechal de Lattre de Tassigny  
94120 Fontenay sous bois – France**

Information requirements for electrical local space heaters Exigences d'informations applicables aux dispositifs de chauffage décentralisés électriques			
Model number/Référence(s) du modèle:		W-HF1705 / TCG-2016	
Item / Caractéristique	Symbol Symbole	Value Valeur	Unit Unité
<b>Heat output / Puissance thermique</b>			
Nominal heat output / Puissance thermique nominale	P <sub>nom</sub>	1,8-2	kW
Minimum heat output (indicative) / Puissance thermique minimale (indicative)	P <sub>min</sub>	1	kW
Maximum continuous heat output / Puissance thermique maximale continue	P <sub>max,c</sub>	2	kW
<b>Auxiliary electricity consumption / Consommation électrique auxiliaire</b>			
At nominal heat output / A la puissance thermique nominale	e <sub>lmax</sub>	0	kW
At minimum heat output / A la puissance thermique minimale	e <sub>lmin</sub>	0	kW
In standby mode / En mode veille	e <sub>lsb</sub>	0	kW
<b>Type of heat input, for electric storage local space heaters only (select one) Type d'apport de chaleur, pour les dispositifs de chauffage décentralisés électrique à accumulation uniquement(sélectionner un seul type)</b>		<b>YES / OUI</b>	<b>NO / NON</b>
manual heat charge control, with integrated thermostat contrôle thermique manuel de la charge avec thermostat intégré			V
manual heat charge control with room and/or outdoor temperature feedback contrôle thermique manuel de la charge avec réception d'informations sur la température de la pièce et/ou extérieure			V
electronic heat charge control with room and/or outdoor temperature feedback contrôle thermique électronique de la charge avec réception d'informations sur la température de la pièce et/ou extérieure			V
fan assisted heat output / puissance thermique réglable par ventilateur			V
<b>Type of heat output/room temperature control (select one) Type de contrôle de la puissance thermique/de la température de la pièce(sélectionner un seul type)</b>		<b>YES / OUI</b>	<b>NO / NON</b>
single stage heat output and no room temperature control contrôle de la puissance thermique à un palier, pas de contrôle de la température de la pièce			V
Two or more manual stages, no room temperature control contrôle à deux ou plusieurs palier manuels, pas de contrôle de la température de la pièce			V
with mechanic thermostat room temperature control contrôle de la température de la pièce avec thermostat mécanique		V	
with electronic room temperature control contrôle électronique de la température de la pièce			V
electronic room temperature control plus day timer contrôle électronique de la température de la pièce et programmateur journalier			V
electronic room temperature control plus week timer contrôle électronique de la température de la pièce et programmateur hebdomadaire			V
<b>Other control options (multiple selections possible) Autres options de contrôle (sélectionner une ou plusieurs options)</b>		<b>YES / OUI</b>	<b>NO / NON</b>
room temperature control, with presence detection contrôle de la température de la pièce, avec détecteur de présence			V
room temperature control, with open window detection contrôle de la température de la pièce, avec détecteur de fenêtre ouverte			V
with distance control option / option contrôle à distance			V
with adaptive start control / contrôle adaptatif de l'activation			V
with working time limitation / limitation de la durée d'activation			V
with black bulb sensor / capteur à globe noir			V
Contact details / Coordonnées de contact	Sotech International 33, Av du Mal de Lattre de Tassigny 94120 Fontenay sous Bois - France		