

Techwood®

POSITIVE TECHNOLOGY

TCO-2530
TCO-2535

GROOMING SET, *“Beauty for Men”*



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

 
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children aged less than 8 years of age when it is energized or cooling down.
- This device is not a toy , do not leave small children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person^(*) in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Never wind the cord around the appliance and do not bend it

- Ensure that the power cord does not come into contact with hot parts of this unit.
- Make sure the appliance has cooled down before cleaning and storing it.
- The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- Before cleaning, always unplug the appliance from the power supply and let it cool down.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Always remove the plug from the wall socket when the appliance is not in use.
- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device complies with standards relating to this type of product.

(*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

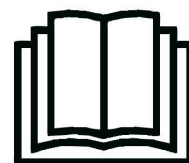

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



 
The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

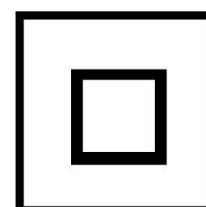

The symbol "TUB / SHOWER" crossed out means to never use the unit in a bathroom, a shower in or near

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

TT-2530
TT-2535





 
HAIR CLIPPER INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

READ ALL INSTRUCTIONS BEFORE USING AND SAVE THESE INSTRUCTIONS

PART NAME

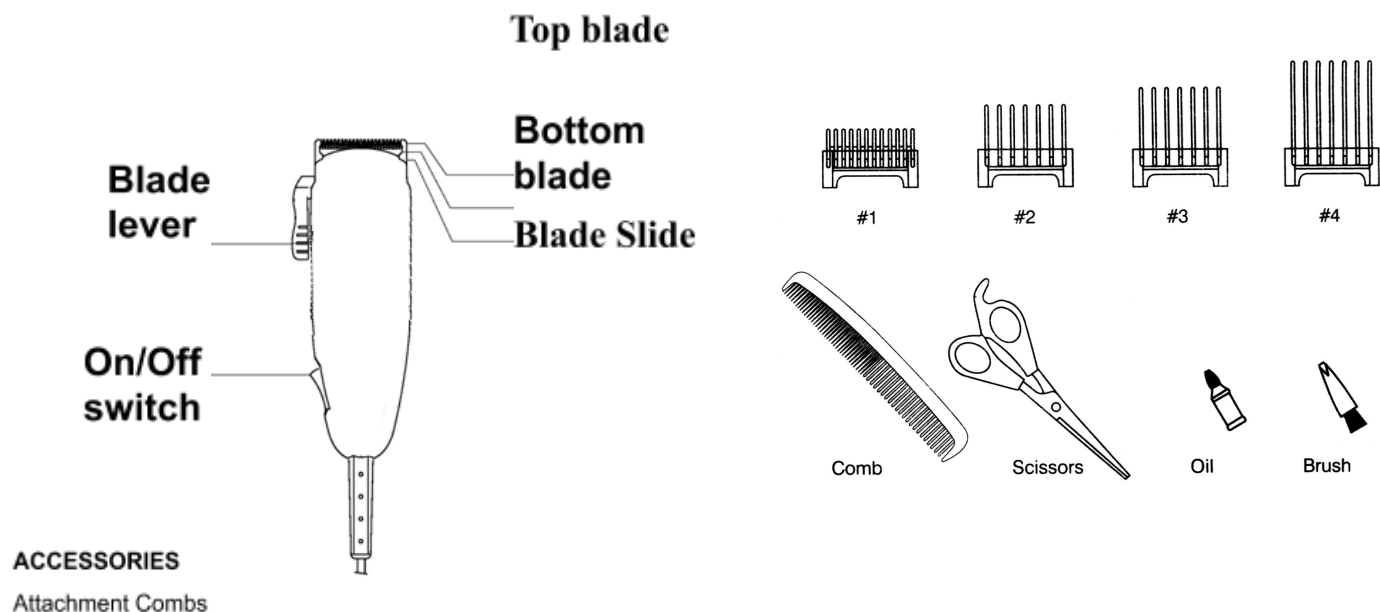

GUIDE FOR CUTTING HAIR AT HOME

Never use the product to cut wet hair, It is designed to work in dry condition only.

BEFORE YOU BEGIN

- Make sure that your clipper is clean, properly oiled and perfect working condition.
- Place a towel around the neck of the person to prevent hair from falling down inside the collar.
- Position the person whose hair is to be cut on a chair so that his/her head is at your eye's level.
- Comb the hair to remove all tangles, hold the clipper in a relaxed comfortable grip. This will help you to maintain an accurate cutting control.

CUTTING HAIR WITH THE ATTACHMENT COMBS

 
For medium to long cut

- To attach combs, hold comb with teeth up, snap comb attachment firmly to the bottom of the clipper blade,

- Attachment comb #1 --- leaves hair approx.

Blending in length

- Attachment comb #2 --- leaves hair approx. 1/4" in length
- Attachment comb #3 --- leaves hair approx. 1/2" in length
- Attachment comb #4 --- leaves hair approx. 3/4" in length

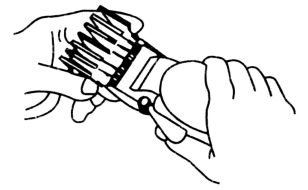

- Special angle comb is available.
- At the beginning, cut only a small amount of hair until you become accustomed to the length each attachment comb leaves the hair.
- It is suggested to try the longest attachment comb on the clipper first, then use the shorter one if the desired length is shorter.
- For uniform cutting, never push or force the clipper through the hair at a fast rate. The clipper works most efficiently when it works at its own speed.
- Start by combing the hair in its natural direction,
- Place the largest, attachment comb onto your clipper and start by trimming the sides from the bottom upwards.
- Hold the clipper lightly against the hair with teeth of the attachment comb pointing up but flat against the head.
- Slowly lift the clipper up and outward through the hair, cutting only a small amount at a time.(Fig. 1)
- Repeat around sides and back of head.(Fig.2)
- If you desire shorter hair, either change to a lower number attachment comb or apply more pressure and less lift away from head with the present attachment comb.
- This entire procedure requires practice, and it is always better to leave too much hair the first few haircuts.(Fig.3)
- For the top of the head, you will give a fairly short cut if you use the #4 attachment comb. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.(Fig.4)



Fig



Fig
2



Fig



Fig
.4

Outlining

- Outlining requires no attachment. Take the clipper and push the lever up to the close-cut position.
- Comb hair into the style. Position clipper between the side burns and the ear.(Fig. 5)
- Make sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around, and behind the ears.(Fig.6)



Fig

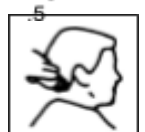 


Fig
.6

- For the back of the neck and the sideburns, hold the clipper upside down, (see sketch), and holding it against the skin at the length desired, move downwards.

Short cuts to perfect flat tops, crew cuts

 
- Always cut from the back of the neck to the crown, using the longest attachment comb. Holding it flat against the head, slowly move the clipper up through the hair.
- Use the same technique for the sides, cutting from the bottom to the upper side of the head. (Fig.7)
- For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.(Fig.8)
- For a flat top, use a flat comb, not the attachment comb. Just cut hair on top of the head over it.
- To taper hair down to the neckline, use closer cutting attachment combs. Comb hair and check for uneven spots and outline sideburns and neckline.(Fig.9)



Fig




Fig

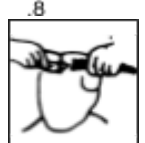

Fig

.9


 
If a short tapered cut on the sides and back is desired, follow the diagram below:

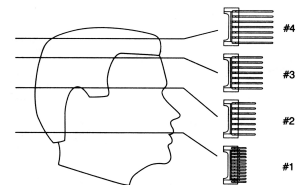

The four basic areas illustrated on the hair cutting guide are your "road map" to easy do-it-yourself hair cutting.


MAINTENANCE

  - Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
- Blades must be realigned if they have been removed for cleaning or replacement.
- To realign the blades, simply match the upper and bottom blades teeth up, point for point.
- (End of top blade teeth) should be approximately 1.2mm back from bottom blade.
- Compare your clipper blades with the sketch)
- If blade alignment is incorrect, add a few drops of oil to the blades, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned.

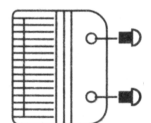


OIL

 - To maintain your clipper in peak condition, the blades should be oiled every few haircuts.
- Do not use hair oil, grease, oil mixed with kerosene or any solvent. As the solvent will evaporate and leave the thick oil which may slow down the blades motion.

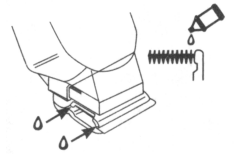

ADJUSTABLE LEVER

 - The lever is conveniently located near your thumb (if you're right handed) so it can easily be adjusted while the clipper is in your hand.
- The lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without an attachment comb.
- When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. Pushing the lever downward gradually increases the cutting length.
- In its lowest position, the lever will leave the hair approximately the same length as a #1 comb.
- The lever will also extend the use of your blades since a different cutting edge is used in each setting.
- In addition, if extremely heavy hair cutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades.
- While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time after you have finished using your clipper will help to keep the blades clear of cut hair.
- If your clipper stops cutting and this does not help, your cutting blade are dulled. Replace them with new blades.

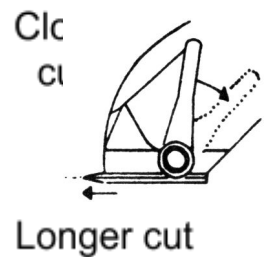

SPECIFICATIONS

Power supply	220-240V~ 50Hz
Power	10W
Norm	Class II

CLEANING AND MAINTENANCE

- *Before cleaning switch the device off with the on/off switch. Open the battery compartment. Take the cleaning brush out of the holder on the battery compartment over and remove the battery from the battery compartment.
- *Turn the shearing head to the left to loosen it and then pull it out. Pull out the shearing blade with caution. Warning: the cutting blade is sharp! DANGER OF INJURY!
- *Brush the shearing head and clamp in a star-shaped manner. Remove even the smallest bits of hair by blowing.
- *Mount the shearing head back on the drive shaft of the device and screw it on by turning to the right.
- *After cleaning insert the cleaning brush back into the holder, insert the battery and close the battery cover.
- *Push the protection cap back on the shearing head.

Before cleaning switch off the appliance

Always disconnect the apparatus and let it cool before cleaning.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or any other liquid !

Do not use abrasive cleaners, gritting, or metal brush or any other cutting object.

operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

Always unplug the appliance before any cleaning or maintenance operation and accessories assembly.

CAUTION: If the electric cable is damaged, it must be replaced by the manufacturer, his after-sales service or people with similar qualification, in order to avoid any danger. In order to minimize the risks of electric shock, in the event of breakdown, do not open the case but call upon a qualified technician for repairs.

This apparatus satisfies EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD). This apparatus was designed and manufactured in respect of the latest safety regulations and technical specifications.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

RECHARGEABLE RAZOR

INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

RECHARGEABLE SHAVER

TO KNOW HIS UNIT

1. Protective cover of the cutting blades
2. Micro stainless steel grid
3. Cutting heads (A - B - C)
4. Eject button of the shaver head
5. Body
6. On / Off switch
7. Charging indicator light

Shaver

1. Take off the shelter and press the switch.
2. Softly touch your skin and move in the contrary growth direction of beards slowly.
 - If you stretch your skin tightly, you can obtain better effect.
3. Once the shaving is over, push the switch down at once and cover it with the shelter.

NOTE : Charging time can't exceed 15 hours or it affects the life of battery, even damages the line.

 
Trimmer

1. Open the back cover and pull off the trimmer.
2. Softly touch your skin in the right-angle direction with the trimmer and trim slowly.
3. After using, push down the switch and cover it with the shelter.
4. Press the switch and take off the shelter. Press the outer-cutter button and take off the outer cutter. Clean the beards on the outer cutter, the inner cutter and the body (1 time a week).
5. After cleaning, assemble the outer cutter and the inner cutter on the original position and cover it with the shelter.

- Don't press the net shelter.
- Don't prizes open the net shelter with a screw with a screw driver.
- Do not change the positions of A B C heads and the directions of net cover so as to avoid the affection to the normal operation of razor.

Maintenance

1. Remove the protective cover of the grid
2. Press the button (located under the head) to separate the shaver head and

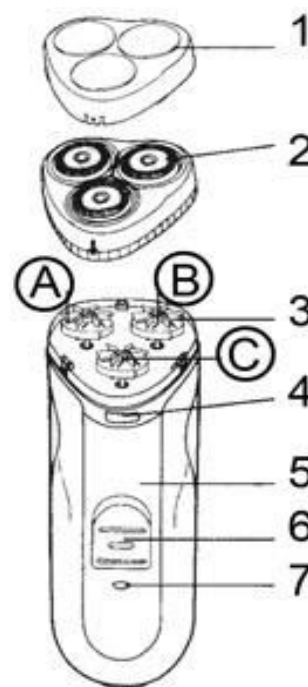

body.

3. Also press the button on the back of the unit to remove the trimmer.
4. Remove the beard hairs with the brush provided and, if necessary, use a damp cloth to clean the body.
5. After cleaning, reassemble the razor head with body in accordance with the initial position and place the trimmer on the original position.
6. Replace the cover.

Charging

1. Push the switch down and close electrical power.
 - The charging indicator is on, which shows that it is charging.
2. After 12 hours, charging is over. Charging power is 230V~ 50/60Hz.
3. At first using, be sure the scored power is completely out, before charging, which can durable the battery.
4. The shaver can be used for about 5 or 6 times for shaving.

SPECIFICATIONS

Razor

Power supply	220-240V~ 50/60Hz
Power	3W
Norm	Class II
Battery	Ni-Mh AA or LR6 600mA / 1,2V

CLEANING AND MAINTENANCE

Before cleaning switch off the appliance

Always disconnect the apparatus and to let it cool before cleaning.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place.

NOZZE TRIMMER
INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

NOSE TRIMMER

- Only the blade unit and INNER/ONUTER blades should be cleaned.
- Keep motor and battery dry.
- Dry the blades before replacing.

Special safety instructions

- *Do not insert the device further than the thin tip of the shearing blade up your nose!
- *Do not use the device if the shearing blade holder, the shearing blade or the inner blade are distorted or damaged! DANGER OF INJURY!
- *This device is to be used exclusively for the cutting of nose and ear hair! Do not use the device any other purpose!
- *The shearing blade and the inner blade are precision-manufactured. Do not exert heavy loads on it and avoid knocking!
- *Keep the device away from humidity and liquids!
- *Do not remove the shearing head during use! Switch off the device and remove the battery before cleaning!
- *Do not insert pointed objects in the shearing head.

Insert Battery

- *Open the battery compartment by pushing the cover down and away.
- *Insert an LR6 or AA type 1.5V battery with the positive pole (+) upwards in the battery holder.
- *Place the cover back on the battery compartment.

Putting into Service

1. Take the protection cap off the shearing head.
2. To switch on the device shift the on/off switch towards the shearing head.
3. Insert the tip of the shearing head in your nose. Warning: Remove only the hair coming out of your nose and do not press the device inwards! Do not insert the shearing head too deep and forcefully into your nose: risk of injury!
4. If pieces of hair remain in your nose after cutting, remove these simply by clearing your nose.
5. Switch the device off after use with the on/off switch and open the battery compartment.
6. Take the cleaning brush out of the holder on the battery compartment cover. Brush the shearing head in a star-shaped manner.
7. After cleaning insert the cleaning brush back into the holder and close the battery cover.

Caution : Depending on the quantity of cut hair it is advisable to thoroughly clean the device from time to time as described below in “Cleaning”!

CLEANING AND MAINTENANCE

- *Before cleaning switch the device off with the on/off switch. Open the battery compartment. Take the cleaning brush out of the holder on the battery compartment over and remove the battery from the battery compartment.
- *Turn the shearing head to the left to loosen it and then pull it out. Pull out the shearing blade with caution. Warning: the cutting blade is sharp! DANGER OF INJURY!
- *Brush the shearing head and clamp in a star-shaped manner. Remove even the smallest bits of hair by blowing.
- *Mount the shearing head back on the drive shaft of the device and screw it on by turning to the right.
- *After cleaning insert the cleaning brush back into the holder, insert the battery and close the battery cover.
- *Push the protection cap back on the shearing head.

Before cleaning switch off the appliance

Always disconnect the apparatus and let it cool before cleaning.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or any other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

Nose trimmer

Power supply 1.5V AA or LR6 battery (not included)

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

FOR ALL THE DEVICES

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 12 months starting from the date of purchase.

The documents in proof of guarantee are :

- The invoice and

- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

Always unplug the appliance before any cleaning or maintenance operation and accessories assembly.

CAUTION: If the electric cable is damaged, it must be replaced by the manufacturer, his after-sales service or people with similar qualification, in order to avoid any danger. In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD). This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.



INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

The symbol "FLASH" is intended to alert the user to the presence of current within the device. Do not open it, it could constitute a risk of electric shock.

The symbol "QUESTION MARK" warns the user that important operating and maintenance are contained in the record.

The symbol "TUB / SHOWER" crossed out means to never use the unit in a bathroom, a shower in or near water spray. (IP20 Minimum distance 3M.)

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.

The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol "RECYCLING" raise consumer awareness on the need to recycle its waste. Recycling is a process by which materials that compose a product in end of life (industrial or household waste) are reused in whole or part and will be returned to the initial production cycle.

 
The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.

The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "HOT WALL" warns the user that the walls of the unit can become very hot, and to take precautions as required.



The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

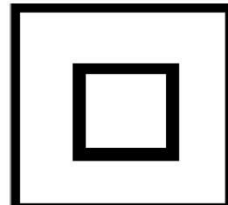

The symbol "MAN" means that the device can be used on the skin or human orifices. (Example: Thermometer).



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).

For more information : <http://www.quefairedemesdechets.fr>



**Imported by Sotech International
" LE PERIPOLE " N°C111 à 115
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous bois - France**