

Techwood[®]
POSITIVE TECHNOLOGY

TCO-2555
TCO-2566

RECHARGEABLE CLIPPER
+
RECHARGEABLE RAZZOR
INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ❑ Cleaning and maintenance must not be made by children without supervision.
- ❑ **Keep the appliance and its cord out of reach of children aged less than 8 years of age when it is energized or cooling down.**
- ❑ Warning : Keep The appliance dry.
- ❑ This device is not a toy, do not leave small children or people with disabilities to play with.
- ❑ In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- ❑ Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- ❑ From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- ❑ Never immerse the appliance in water or any other liquid for any reason whatsoever.

- ❑ Never place it into the dishwasher.
- ❑ Never use the appliance near hot surfaces.
- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ This appliance is only intended for household use.

FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Stand the appliance on a table or flat surface.
- Never modify the appliance in anyway.

FEATURES OF THE CLIPPER


1. HAIR TRIMMER
2. Cutting head
3. Removable head and comb
4. Cutting length control wheel
5. On / Off switch
6. Indicator light charge control
7. Power jack for adapter



Loading the rechargeable battery

Before first time use, the hair trimmer must be fully charged.

1. Slide the On/Off switch downwards.
2. Insert the plug of the mains adaptor into the power jack of the hair trimmer.
3. Plug the mains adaptor into a power socket outlet.

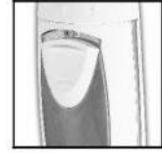

The indicator light will not go out when the rechargeable battery is loaded.

Note about the rechargeable battery

The rechargeable battery does not have its full capacity from the start. To obtain the maximum charge capacity, the battery should be fully charged prior to being used for the first time and then the hair trimmer should be used until the batteries are completely flat. The batteries should then be fully recharged. To increase the life of the rechargeable batteries, this charging and discharging procedure should be repeated approximately twice a year.

Using the trimmer without charging the batteries before hand

Mains electricity (via the mains adaptor) can also be used to power the trimmer.

In that event :

- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
 - Never use this apparatus near water projections.
 - Never use this apparatus with the wet hands.
1. Connect the hair trimmer as described in the section "Loading the recharge-able battery".
 2. Unplug the adaptor after use.

Guide comb

Use the guide comb to shorten hair evenly to a length of 4-16mm. To set the desired length, press the closure latch of the guide comb and slide it either upwards or downwards.

The set length is indicated on the scale of the appliance.



Shaping the beard and shaving the back of the neck is done without attachments.

1. Remove the attachment.
2. Draw the cutting head at a low angle along your skin without applying pressure.



Cleaning and care

1. Remove the comb attachment.
2. Press the shaving head towards the back and remove it.
3. Brush out the shaving head insert.
4. Reinsert the shaving head by inserting the latch of the shaving head



into the groove of the casing.

5. Press the shaving head back into the casing, until it engages audibly.

Oiling the shaving head

Oil the shaving head from time to time if you use the trimmer regularly.

Use non-corroding oil, for example sewing machine oil.

1. Remove the comb attachment used.
2. Apply one to two drops of oil between the cutting teeth.
3. Turn the trimmer briefly on and then off again to distribute the oil.
4. Remove any excess oil by wiping with a cloth.
5. Replacing the shaving head.
6. Only use original accessories. Accessories such as the shaving head, mains adaptor and comb attachments are available at specialist shops. Never attempt to sharpen the shaving head yourself. Switch the trimmer off!
7. Change the shaving head as described in cleaning the shaving head.

Power becomes weak after a brief period

Load the rechargeable battery pack, if necessary operate the trimmer with the mains adaptor.

Clean and oil the shaving head or replace with a new one

Disposal

Dispose of the packaging in the proper manner.

If you wish to dispose of the appliance, turn out the screw and remove the double rechargeable battery pack. Afterwards, The appliance is destroyed. Special containers are provided for disposing of rechargeable batteries at shops selling them public collection points. The other parts of the appliance can be disposed of according to current regulations. Details are available from your local authority.


FEATURES OF THE SHAVER

1. **RECHARGEABLE SHAVER**
2. **3 cutting heads**
3. **Finition hair trimmer**
4. **Opening knob for cleaning head**
5. **On / Off switch**
6. **Indicator light charge control**
7. **Power jack for adapter**




Important Presentation

1. Turn off the switch when charging.
2. Rechargeable waterproof shaver
3. The foil is made thin through precision finishing. Don't press it hard or strike it with hard substances for avoiding damaging the foil and scoring your skin.

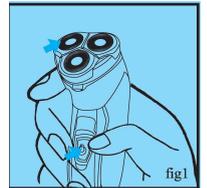

Charging

1. The shaver can be connected to mains 230 voltages 50Hz.
2. It takes about 8 hours to charge the shaver completely.
3. Fully charged, the shaver will give a maximum of 40 minutes of cordless shaving time.
4. After charging, set the socket wiring aside.

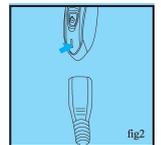

About the rechargeable battery

To guarantee a long life for your rechargeable battery, please observe the following requirement:

1. Charge and store the shaver at temperatures between 5°C and 35°C.
2. Do not leave the shaver connected for over 48 hours to the mains.



Shaving


1. Make sure the shaver is properly charged.
2. Press the on-off switch and then you can use the shaver.
3. Put the shaver sword meshwork clinging to the skin and move fast. You can carry out circle movement or rule less movement.
4. Switch the shaving on by sliding the switch upwards.
5. Move the shaving heads quickly over the skin. Make both straight and circular movements.
6. Stretch the skin with your free hand.



7. Hair on the neck can also be shaved off in this way.
Please bear in mind that your skin may need two to four weeks to become fully accustomed to the unique HILLMANN shaving system.
8. Place the protective cap back on the shaver after use(fig 5)


Usage(trimmer):

1. Open the back cover and pull out the trimmer(fig.6)
2. Softly touch your skin in the right-angle direction with the trimmer and trim slowly.
3. After using, push down the switch.

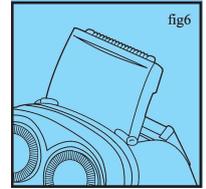

Maintenance:

1. Clean the shaving accessories once a week.
2. Turn off the switch and take off the shelter. Press the outer-cutter button and take off the outer cutter. Clean the beards on the outer cutter, the inner cutter and the body (1 time a week). After cleaning, assemble the outer cutter and the inner cutter on the original position and cover it with the shelter.
3. Do not change the position of 1,2 and 3 and the directions of the net cover so as to avoid the affection to the normal operation of razor.

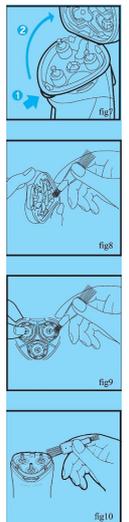

Special Warning

If you want to discard this razor, please open the back cover, unload the battery and take it to a place designated by the government for the protection of the government.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 12 months starting from the date of purchase.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

RAZOR:

POWER SUPPLY : 3 200mA
BATTERY : 2x 600mAh
MOTOR : 2,4
NORM CLASS : CLASS III

Adaptor:

POWER SUPPLY : 230-240V~ 50Hz / 3 300mA
NORM CLASS : CLASS II

HAIR CLIPPER:

POWER SUPPLY : 3 200mA
POWER : 3W
BATTERY : 2x 600mAh
MOTOR : 2,4
NORM CLASS : CLASS III

Adaptor:

POWER SUPPLY : 230V~ 50/60Hz / 3 200mA
NORM CLASS : CLASS II

CHARGING TIME: 8 AND/OR 12 HOURS

The characteristics can change without preliminary preventing

To provide additional protection, the installation, in the electrical circuit supplying the bathroom, of residual current device (RCD) of rated residual operating current, not exceeding 30mA, is recommended. Ask your installer for advice.

NOTE: A circuit breaker is not a residual current device (RCD).

Always unplug the appliance before any cleaning or maintenance operation and accessories assembly.

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.


This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD). This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

ENVIRONMENTAL PROTECTION
(Destruction of Ni-MH or Ni-Cd batteries)

The appliance must be disconnected from the main power, when the battery is removed.

To remove the battery:

- Remove the two screws located in the upper part,
 - Remove the screws at the back under the plate.
 - Disassemble the two parts of the unit and remove the battery.
- THE BATTERY MUST BE REMOVED BEFORE THE UNIT IS GIVEN TO REBUS.
- THE BATTERY MUST BE ELIMINATED IN A SAFE WAY.

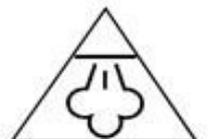

INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

The symbol "FLASH" is intended to alert the user to the presence of current within the device. Do not open it, it could constitute a risk of electric shock.

The symbol "QUESTION MARK" warns the user that important operating and maintenance are contained in the record.

The symbol "TUB / SHOWER" crossed out means to never use the unit in a bathroom, a shower in or near water spray. (IP20 Minimum distance 3M.)

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.

The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol "RECYCLING" raise consumer awareness on the need to recycle its waste. Recycling is a process by which materials that compose a product in end of life (industrial or household waste) are reused in whole or part and will be returned to the initial production cycle.

The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.

The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak



concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "HOT WALL" warns the user that the walls of the unit can become very hot, and to take precautions as required.

The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

The symbol "MAN" means that the device can be used on the skin or human orifices. (Example: Thermometer).

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).

For more information : www.quefairedemesdechets.fr



**Imported by Sotech International
PARC "LE PERIPOLE" - N°C111 à 115
33, Avenue du Marechal de Lattre de Tassigny
94120 FONTENAY SOUS BOIS – France**