

RECHARGEABLE EPILATOR TRIMMER BRUSH AND MASSAGE SET WITH USB-C INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.



IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by children aged from 8 years and older adults, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards

involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years of age when it is energized or cooling down.
- This device is not a toy, do not leave small children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.

- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. **The admissible power must be at least 16A, 250V, 3000W.**
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ This appliance is only intended for household use.

- Regarding the instructions for cleaning, please refer to the below paragraph of the manual.
- Regarding the battery charging instructions, refer to the paragraph below in the instructions.
- **WARNING:** This device is supplied without a power supply.
- This device contains batteries which may only be replaced by qualified personnel.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "TUB / SHOWER" crossed out means to never use the unit in a bathroom, a shower or near water spray. (IP20 Minimum distance 3M.)



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE,



the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

SPECIAL WARNING FOR PRODUCTS USABLE IN A BATHROOM

- Do not use this device while taking a shower or bath. Always unplug the device even between two uses close together.
- When the device is used in a bathroom, unplug it after use because the proximity of water presents a risk, even if the device is turned off.
- To ensure additional protection, the installation, in the electrical circuit supplying the bathroom, of a residual current device (RDC) with a rated operating differential current not exceeding 30mA, is recommended. Ask your installer for advice.
- NOTE: A thermal circuit breaker is not a residual current device (RDC).
- Do not use this device while taking a shower or bath.
- Always unplug the device even between two uses close together.
- For example: Turn off the appliance and unplug it if you put it down while drying off.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance, disconnect the apparatus and let it cool. Clean the outside of the apparatus with a sponge or slightly wet linen. Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

- For a good and smooth epilating result, it is essential that you clean the epilating head after each use.
- Switch the appliance off.
- Clean the epilating discs of the epilating head and all other parts that have become accessible with the brush supplied.
- Do not use aggressive cleaners, scouring agents, petrol, acetone etc. to clean the plastic housing of the appliance.
- Never try to remove the epilating discs from the epilating head.

FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

USE

- Unroll the power cord completely.
- Check that the tension where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet 12V.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

Make sure your skin is clean, entirely dry and free from grease. Do not use any cream before you start epilating.

Epilation is easier just after taking a bath or shower.

After epilation, you can apply a mild cream or lotion to help reduce possible skin irritation.

TO KNOW ITS UNIT

Massager Roller head
Tête de rouleau de massage



Body massage head
Tête de massage corporel



Skin stretcher cap
Capuchon d'étirement de la peau



Delicate area cap
Bouchon zone délicate

 


Facial cap
Bonnet facial



Epilating head
Tête d'épilation

Shaving cap + the comb
Tête de rasage + le peigne

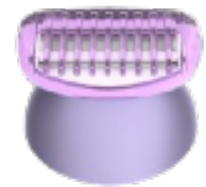


On/Off button
Bouton Marche / Arrêt

Body
Corps de l'appareil

 Body exfoliant brush
Brosse exfoliante corps



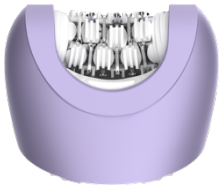

Epilating head

You can use the epilating head to epilate your legs, underarms, and bikini line. Select speed 2 for most efficient epilation. Select speed 1 for areas with little hair growth and for hard-to-reach areas such as knees and ankles.



Massager Roller head

For an extra gentle epilation by stimulating your skin.



Skin stretcher cap

You can attach the skin stretcher cap onto the epilating head. It keeps the skin tight during epilation to reduce pain.



 
Delicate area cap

You can attach the delicate area cap onto the epilating head for more comfortable epilation of delicate areas (e.g. the underarms and bikini line).



Facial cap


You can attach the facial cap onto the epilating head for precise epilation of facial hair (e.g. above your upper lip).

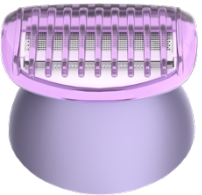

Shaving head

you can use the shaving head to have your legs and body.

 Note the appliance can be moved in to two directions, for easier shaving of underarms.

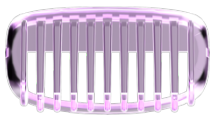

Comb for shaving head

You can attach the comb onto the shaving head to trim hairs to a length of 3mm.

Alternative use You can attach the comb onto the trimming head to trim on the bikini area to a length of 3mm.



Body massage head

The body massage head rotates firmly to relax your muscles.

Note: you have to put the body massage head to the coupling unit before you can attach it onto the handle.



Body exfoliant brush

You can use the body exfoliant brush to remove dead skin cells.

Note: you have to put the body exfoliation brush in the coupling unit before you can attach it onto the handle

USING YOUR APPLIANCE

- The two-level speed design and the rotating discs catch even the shortest hairs and pull them out by the root. Epilating with this new appliance leaves your skin smooth and hair-free for several weeks.
- With grooming function, it can replace the head part and groom easily on main body.
- With rechargeable function : charging time : 90mins, it can work for 90 mins after charging.

Epilating, shaving and trimming.

- The appliance is suitable for use in the bath or shower, but it can also be used dry. If you want to use creams or body lotion, apply them after you have used the appliance.
- For gentle, less painful epilation, use the appliance on wet skin with or without your regular shower gel.
- Slight skin irritation like red skin or red dots may occur after epilation, this is normal. We advise you to epilate before you go to bed at night, as any redness or skin irritation usually disappears overnight.

Note: the appliance can only be used without cord.

Charging

- Insert the USB-C cable on the appliance.
- Insert the main plug into the USB port.

Shaving

- In order to get the best effort, move the appliance over the skin against the direction of hair growth.
- Stretch the skin with you free hand to make razor flat on skin and to make trimmer and foil work simultaneous.

Epilating

- Press the button to change head parts, press both sides of razor head with thumb, remove bead parts install epilator parts and then use.
- Select speed 1 for areas with little hair growth, for hard-to-reach areas

and for areas where bones are located directly beneath the skin, such as knees and ankles.

- Select speed 2 for larger areas with stronger hair growth.
- Stretch the skin with your free hand to make the hair stand Upright.
- Place the epilator perpendicularly onto the skin with the On/Off slide pointing the direction in which you are going to move the appliance
- Move the appliance slowly over the skin, against the direction of hair growth.
- Switch the appliance off by pushing the On/Off side pointing 0.

CHARGING

- Turn off the switch and connect the appliance to the USB charging port. Then switch on the power, it indicates well recharging when the indicator lights.
- It takes about 8 hours to charge the epilator completely, or it will affect battery life and even cause fully unnecessary circuit damage.
- It can be charged after fully release power so as not to affect the charging after shave and epilate as shown in a & b.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

GUARANTEE IN ACCORDANCE WITH REGULATIONS

Before being delivered, all our products are subjected to rigorous checks. This device is guaranteed for 24 months from the date of purchase of the product by the consumer.

The warranty documents are:

- the invoice and
- the warranty certificate (located on the side or the bottom of the box) stamped and completed.

Without these supporting documents, no free replacement or free repair can be made.

During the warranty period, we take charge, free of charge, for defects in the device or accessories, resulting from a defect in materials or workmanship by repair or replacement.

Services under the legal guarantee do not entail any extension of the guarantee period and do not give the right to a new guarantee.

In the event of a warranty claim, return the complete device to your dealer, in its original packaging, accompanied by proof of purchase.

The breakage of glass or plastic parts is, in all cases, your responsibility.

Wearing parts (for example: motor brushes, hooks, drive belts, spare remote control, spare toothbrushes, saw blades etc.) as well as their cleaning, maintenance or replacement, are not guaranteed and are therefore at your expense.

In the event of foreign intervention, the guaranteed lapses.

After expiry of the warranty period, repairs can be carried out, against payment, by a specialist dealer or a repair service.

SPECIFICATIONS

Battery	: 3,7V \equiv 600mAh rechargeable Li-ion
Charging time	: approx. 90 min
Using time	: approx. 50-90 min
Power	: 3W
Waterproof	: IPX7
Include	: USB-C Cable

Made in PRC

The characteristics can change without prior notice

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

To provide additional protection, the installation, in the electrical circuit supplying the bathroom, of residual current device (RCD) of rated residual operating current, not exceeding 30mA, is recommended. Ask your installer for advice.

NOTE: A circuit breaker is not a residual current device (RCD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

ENVIRONMENTAL PROTECTION

(Destruction of batteries)

To remove the battery:

The appliance must be disconnected from the main power, when the battery is removed.

- Open the battery compartment and retrieve the battery or batteries.
- THE BATTERY MUST BE REMOVED BEFORE THE UNIT IS GIVEN TO REBUS.
- BATTERY CONTAINS NICKEL CADMIUM AND / OR LITHIUM AND / OR NICKEL-METAL HYDRIDE, THE BATTERY MUST BE ELIMINATED IN A SAFE WAY. DO NOT THROW IN A TRASH CAN, BUT GIVE IN CENTRE OF WASTE.
- **The external flexible cable or cord cannot be replaced. If the cord is damaged the appliance should be scrapped.**

Faulty or used batteries/rechargeable batteries must be recycled in accordance with Directive 2006/66/EC and its amendments. Please return the batteries/rechargeable batteries and / or the product to the available collection points.



Environmental damage through incorrect disposal of the batteries / rechargeable batteries!

Batteries / rechargeable batteries may not be disposed of with the usual domestic waste. They may contain toxic heavy and are subject to hazardous waste treatment rules and regulations. The chemical symbols for heavy metal are as follows: Cd = cadmium, Hg = mercury, Pb = lead. That is why you should dispose of used batteries/rechargeable batteries at a local collection point.

JANVIER 2024