

GARMENT STEAMER

INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental

- capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance must not be made by children without supervision.
 - Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
 - This device is not a toy, do not leave children or people with disabilities to play with.
 - In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
 - Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
 - From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
 - Never immerse the appliance in water or any other liquid for any reason whatsoever.
 - Never place it into the dishwasher.
 - Never use the appliance near hot surfaces.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person(*) in order to avoid a hazard.
 - Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
 - The iron must not be left unattended while it is connected to the supply mains.
 - The plug must be removed from the socket-outlet before the water reservoir is filled with water.
 - The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

- ❑ The filling aperture must not be opened during use.
- ❑ When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- ❑ The iron must be used and rested on a flat and stable surface.
- ❑ When the iron is put back on its stand, make sure that the surface that supports the iron-rest is stable.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.

- Always remove the plug from the wall socket when the appliance is not in use.
- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.

(*) Competent qualified person: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs

SPECIFIC WARNING FOR IRONS

- Always place the unit on a flat & stable surface.
- Always unplug the unit before filling
- The unit must not be left unattended when it is connected to the main power.

WARNING: BURN HAZARD.

- During operation, the temperature of the appliance surface may be hot.
- The heating parts remain hot, long time after stopping the machine.
- The symbol "Hot Surface" warns the user that the apparatus walls may become hot, and to take precautions.



GENERAL INFORMATION


The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

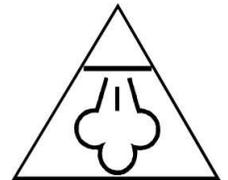

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

CLEANING AND MAINTENANCE

- Always unplug the unit and allow it to cool before cleaning.
- Clean the outside of the appliance with a sponge or slightly damp cloth.
- Never immerse the appliance in water or any other liquid!
- Never use abrasive products, wire brush or other sharp objects.

Cleaning the filter and the water tank

Clean the filter and the tank every month or when 20 litres of water have been consumed.

Note : This period which can be lengthened or shortened depending on the real amount of used water.

- 1). Unscrew the water tank cover counter-clockwise.
- 2). Pour the residual water out of the tank.

Cleaning instruction

If the steamer is often used at high temperatures, in the long term, it will produce calcium carbonate in the form of powdered salt. Limestone may cause blockage of the pipe, and / or proper operation of the heater. This will affect the effectiveness of the steamer.

It is therefore recommended to clean the steam heater regularly to remove the scale.


For an average use of half an hour per day,

1. For areas with soft water, once every two months.
2. For areas with medium hard water, once every month.
3. For areas with very hard water, two to three times a month.

Cleaning method

1. Add half white vinegar and half water in the tank.
2. Put the tank in the device, and run it for about 10 minutes.
3. After 10 minutes of operation, stop the appliance, disconnect it from the power supply and remove the mixture.
4. Add pure water to the tank, lift the device and shake it several times before removing the water.
5. Repeat this procedure several times, until the smell of vinegar is eliminated.

ACCESSORIES

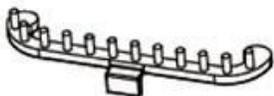

1



2



3




4



1 Brush 2 Clip for pants 3 Clip for pants pleats 4 Protective glove

KNOW YOUR DEVICE


1. Metal vapour diffuser
2. Support, Adjustable hanger
3. Pants clips
4. Height adjustment connector
5. Steam pipe
6. Support tube
7. Clip on the support post
8. Protective sleeve
9. Steam tube connection
10. Switch + Steam power selector
11. Water tank
12. Body
13. Casters

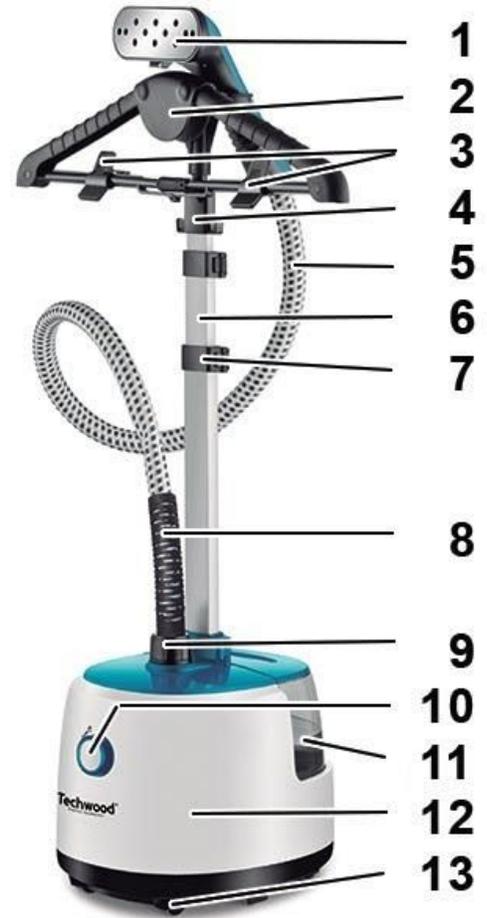

Note: Accessories 1 & 3 are to be assembled (as desired) on the steam diffuser.

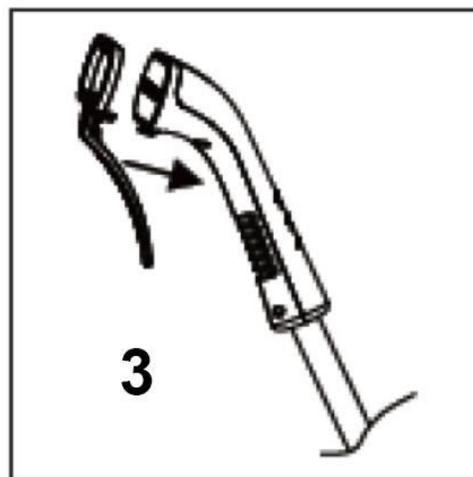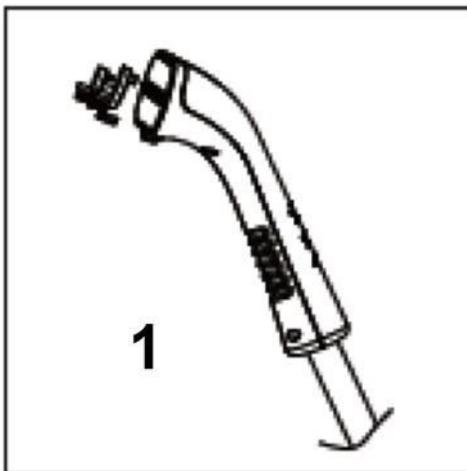


AT THE BACK OF THE DEVICE AT THE BOTTOM OF THE DEVICE

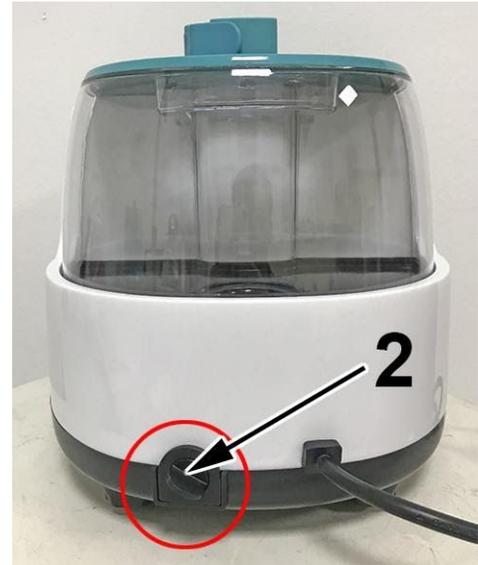

MOUNTING



1. Assemble of the support tube
Insert the tube into the hole on the top of the machine body until it clips.

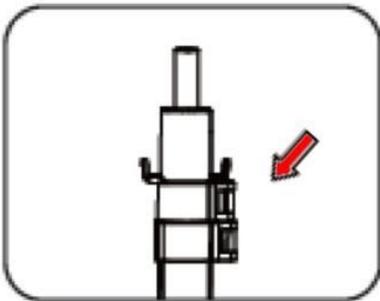

Place the transfer connector on the upper end of the tube.

2. Installation of the adjustable hanger
Unfold the hanger and screw in the adjustment knob.

Insert the support on the top of the support tube.

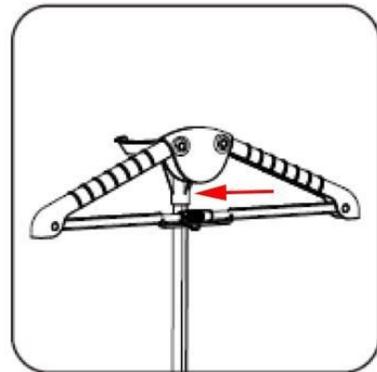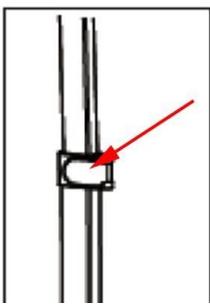

3. Adjustment of the height of the support tube.
Open the clip located in the middle of the support tube.
Adjust to the desired height
Close the clip.

IRONING

Place the machine, assembled, on a flat and stable floor.

Adjust the height of the hanger if necessary and hang the garment to be ironed on it.

Note : Make sure there is enough water in the tank and that it is correctly positioned.

Plug the electrical plug into a grounded outlet if the product is Class I.

Turn the steam selector switch to the desired position.

Let the machine preheat for about 35 seconds, until steam comes out of the diffuser.



Caution

By moving the diffuser from side to side of the garment, water vapor may appear on the handle of the ironing brush. (Risk of burns).

Always iron from the main part of the garment.

1. Hold the hem or the lower part with your hand, gently pull down to flatten the crumpled part and iron the crumpled parts with the steam diffuser.
2. To do this, Gently press the metal panel of the ironing brush onto the garment,
3. Move the brush up and down so that the steam enters the fibers.
4. After ironing the main part, iron the abutments from top to bottom.


Notes : When ironing the collar, you can fold the entire collar back, hold one end of the collar by hand, move the ironing brush horizontally.

Always watch out for steam!

5. When ironing the sleeves, pull the sleeves in a straight line and move the ironing brush along the sleeves.

6. When ironing the lower part of the garments, hold one side of the garment (1), and hold the other side with the extension of the appliance (2).

Move the ironing brush horizontally.

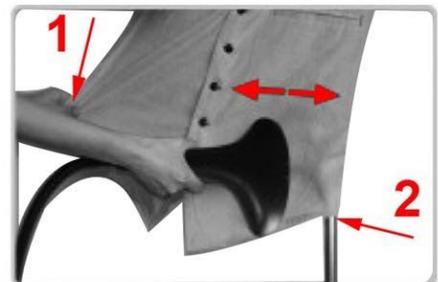

7. After ironing the front of the garment, turn it over to iron the back

Ironing the pants fold

Insert the fold clip on the steam diffuser.

Press the handle to open the accessory and insert the edge of the pants (fold side !) into the clips' jaws.

Move the diffuser + clip to iron gently up and down so that the pants line is straight.

After use, wait for the device to cool down and remove the accessory.

Important note :

If the steam tube bends, it will make a sound. Drops of water may appear from the holes in the steam diffuser and the amount of steam may decrease considerably.

In this case, lift the handle, very high, for 2 to 3 seconds and everything will go back to normal.

GENERAL INSTRUCTIONS

1. Purified water is recommended.

The content of the mineral substance in tap water differs according to the different types of water. There may be sediment which impairs the flow of vapor.

This flow can decrease or even stop.

This is why purified water is recommended to avoid any problems.

STORAGE

- Ensure the unit is completely cool and dry.
- Empty the reservoir by turning the iron upside down and gently shaking it.
- Do not wrap the cord around the appliance, as this will cause damage.
- Always put the iron away in a vertical position.
- Keep the appliance in a cool, dry place out of reach of children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are:

- The invoice and
- The filled and stamped warranty plate (located on side or bottom of the gift box).

Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or,

replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee!
In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.
The breakage of parts out of glass or plastic is, in all the cases, not warranted.
Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay!
In the event of foreign intervention, the guarantee becomes null and void.
After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50-60Hz
Power	1800W
Norm	Class I


Made In P.R.C

The characteristics can change without prior notice.

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note: In the event of question concerning the earth or electric connection, please consult qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

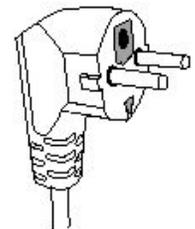

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**