

VERTICAL GARMENT STEAMER

INSTRUCTION MANUAL



TDV-1206



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental

- capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance must not be made by children without supervision.
 - Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
 - This device is not a toy, do not leave children or people with disabilities to play with.
 - In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
 - Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
 - From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
 - Never immerse the appliance in water or any other liquid for any reason whatsoever.
 - Never place it into the dishwasher.
 - Never use the appliance near hot surfaces.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person(*) in order to avoid a hazard.
 - Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
 - The iron must not be left unattended while it is connected to the supply mains.
 - The plug must be removed from the socket-outlet before the water reservoir is filled with water.
 - The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

- ❑ The filling aperture must not be opened during use.
- ❑ When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- ❑ The iron must be used and rested on a flat and stable surface.
- ❑ When the iron is put back on its stand, make sure that the surface that supports the iron-rest is stable.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.

- Always remove the plug from the wall socket when the appliance is not in use.
- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.

(*) Competent qualified person: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs

SPECIFIC WARNING FOR THIS UNIT

- Always place the unit on a flat & stable surface.
- Always unplug the unit before filling
- The unit must not be left unattended when it is connected to the main power.


WARNING: BURN HAZARD.

- During operation, the temperature of the appliance surface may be hot.
- The heating parts remain hot, long time after stopping the machine.
- The symbol "Hot Surface" warns the user that the apparatus walls may become hot, and to take precautions.



GENERAL INFORMATION


The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

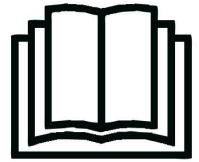

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

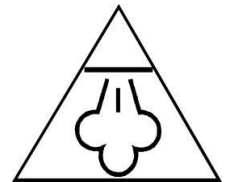

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

CLEANING AND MAINTENANCE

- Always unplug the unit and allow it to cool before cleaning.
- Clean the outside of the appliance with a sponge or slightly damp cloth.
- Never immerse the appliance in water or any other liquid!
- Never use abrasive products, wire brush or other sharp objects.

KNOW YOUR DEVICE

1. Steam diffuser
2. Brush (removable)
3. Steam activation button
4. Handle
5. Water tank unlocking button
6. Water tank (removable)

On the back of the device
On / Off button and indicator light



FIRST USE

Remove any sticker or protection from the steam diffuser.
Unroll and straighten the cord before use.

When using for the first time, let the steam escape for a few minutes. This will remove any impurities and odours that may have been left over from the manufacturing process.

It is best to try it on a piece of fabric before using it on clothing.

USE

1. Press the unlocking button on the water tank and remove the tank.

2. Fill the tank with fresh water, up to the MAX level mark.

Notes : Always make sure that the water tank is at least 1/3 full.

Never exceed the MAXIMUM level when filling the water reservoir.

3. Replace the water tank on the device.

4. Hold the appliance with one hand by the handle, And, in an upright position.

5. Use the other hand to attach the brush to the steam diffuser.

Note : The brush can be fixed in both positions and is locked with an audible "click".

1. Plug the device into an electrical outlet and press the On / Off button.

Notes : The power light flashes and the appliance starts to heat up.

When the indicator light stays on and no longer flashes, the preheating is finished, the appliance can be used.

After use, to turn off the steamer, press the On / Off button.

Notes : When the device is switched off, the indicator goes off.

This steamer has an intelligent automatic switch-off function. When the user stops using the device for a certain period of time, the internal electrical circuit cuts out automatically. This provides more security and saves electricity.

The steamer is perfect for removing wrinkles from clothes and curtains as well as for refreshing upholstery.

Notes : The steamer can be used on most fabrics, as long as the fabric is hanging or when the steamer is used in an upright position by moving it over the fabric in an up and down motion.

This steamer is designed to be used in vertical position on hanging clothes.

Refrain from using it in a horizontal position.

Check that the pockets of the clothes are empty and that the lapels, cuffs and hems are in good position.

Hang the item of clothing on a hanger and pull the fabric lightly with one hand, checking that there is nothing behind the fabric that could be damaged by steam.

Note : It is recommended not to point the steam diffuser at metal accessories.

Hold down the steam button. Vibrations will be felt and a slight humming noise will be emitted during the production of steam.

Gently press the fabric brush against the garment, moving the arm up and down, targeting the folds of the fabric.

To stop steam production, release the steam button.

Notes : For good results, make sure the fabric is taut during steam production.

The steamer generates high steam temperatures, never touch the steam diffuser. Risk of burns.

When using the steamer without the brush, keep a distance of, at least, 5 cm between the steam diffuser and the garment.

Never use the appliance with the steam facing you and in an upright position.

Steam iron the curtains

1. Wash and dry the curtains as directed, depending on the type of fabric.
2. Hang the curtains in their place and spray them with the steam diffuser when they are in place.
3. Pull the curtain slightly with one hand during steaming to help remove folds more easily.

PRECAUTIONS

- *If the garment has metal accessories, be careful and do not use the steamer directly on the metal. It may discolour the metal.*
- *Always unplug the steamer and wait for it to cool before attaching or removing the brush.*
- *Use only the accessories supplied.*
- *If the appliance becomes noisy, with a loud hum and no steam is generated, check the water level in the tank. This may indicate that the steam tank is running out of water and needs to be filled.*
- *Never use the steamer directly on the body, or animals.*
- *Never wear clothes while spraying them.*

After each use

Press the On / Off button and unplug the device.

Take the water tank out of the appliance and empty the remaining water into a sink. Always allow the steamer to cool down, in an upright position, before putting it away.

GENERAL INSTRUCTIONS

It is possible to use purified water, however, this device is designed to work perfectly with tap water, regardless of the hardness of the water.

STORAGE

- Ensure the unit is completely cool and dry.
- Empty the reservoir by turning the iron upside down and gently shaking it.
- Do not wrap the cord around the appliance, as this will cause damage.
- Always put the iron away in a vertical position.
- Keep the appliance in a cool, dry place out of reach of children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are:

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box).

Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee!

In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted.

Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay!

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50-60Hz
Power	1500-1700W
Norm	Class I


Made In P.R.C

The characteristics can change without prior notice.

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note: In the event of question concerning the earth or electric connection, please consult qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

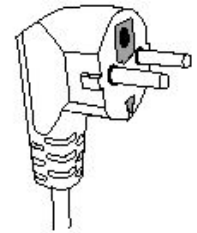

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**