

CORDLESS STEAM IRON

Instruction manual

TFS-246



TFS-248



Dear consumer, please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Cleaning and maintenance must not be made by children without supervision.
- keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- This device is not a toy, do not leave children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person (*) in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The filling aperture must not be opened during use.
- when placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron must be used and rested on a flat and stable surface.
- When the iron is put back on its stand, make sure that the surface that supports the iron-rest is stable.

- ❑ The iron must only be used with the stand provided.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.

- This device, designed for home use, complies with standards relating to this type of product.

(*) Competent qualified person: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs

SPECIFIC WARNING FOR IRONS

- Always unplug the iron before filling the water tank.
- The iron must not be left unattended when it is connected to the main power.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.




The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "HOT SURFACE" warns the user that the walls of the unit can become very hot, and to take precautions as required.



The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

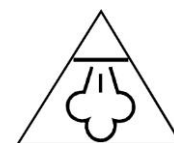

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting



the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

KNOWING THE IRON



- | | |
|-----------------------------------|-------------------------------------|
| 1. Sole with ceramic coating | 7. Express Steam Button |
| 2. Spray nozzle | 8. Power & Heating indicator lights |
| 3. Filling aperture of water tank | 9. Adjustable Thermostat |
| 4. Water tank | 10. Self-cleaning function button |
| 5. Steam regulator | 11. Handle with grip |
| 6. Spray button | |

- 12. Electrical connection (back of the iron)
- 13. Light indicator ring

- 14. Connection base / steam iron
- 15. Steam iron support base

FIRST USE

- Before first use, remove the device and all accessories being careful.
- Clean the apparatus according to the instructions in "Cleaning and maintenance" paragraph.
- Always, place the machine on a suitable flat, stable surface.
- When using the steam function for the first time, do not direct the steam towards the laundry, as there could be debris from the steam vents.

FILLING WITH WATER

We recommend the use of distilled water.

Make sure that both the Steam Control turning Knob and Temperature Control Dial are in "OFF" position.

Hold the iron upright so that the water-filling inlet is in a horizontal position.

Fill with water through Water Filling Inlet until the water reach the "MAX" mark indicated on the side of the iron.

Note : Never fill the tank above this mark.

TEMPERATURE SETTING

Follow the ironing instructions on the garment label. If there is no instruction but you do know the kind of fabric, please consult the following table.

Note : If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.

Fabric	Temperature logos	Temperature requirement
Synthetic	●	Low temperature
Silk, wool	●●	Medium temperature
Cotton, linen	●●● MAX	High temperature

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

STEAM IRONING

The iron in a vertical position, set the temperature control dial at the minimum/low heat setting.

Insert the plug into the socket.

The blue light turns on, indicating that the power is on.

Turn the temperature selector to the "high temperature" mark. The red light will come on, indicating that the iron is heating up.

Notes : When the red light turns off, the set temperature is reached and the iron is ready for use.

During ironing, the iron light turns on and off automatically to indicate that the thermostat is holding the sole, to the settled temperature

Steam is produced as soon as the iron is maintained horizontally.

Turn the steam control knob to the desired position.

Lift the steam iron from its base and start ironing.

Important note : *The iron can be used +/- 45 seconds before to be rested on its base to be recharged. It recharges in 4 seconds for a new use of 45 seconds.*

SPRAYING

Press the spray button to spray water on clothes, as often as required.

Notes : When using the water spray function, ensure that there is enough water in the water tank.

You may have to pump the spray button several times at first time you use the iron in order to start the spraying function.

VERTICAL STEAM IRONING

Press the express steam button to generate a powerful jet of steam that can penetrate the tissues and smooth out the toughest and most stubborn wrinkles.

Notes : In case of rebel creases, spray a little water before using the express steam button.

By pressing the steam button at regular intervals it is possible to use it vertically for curtains, hanging clothes, etc.)

The steam function can only be used at high temperatures.

Stop express steam emission when the indicator light comes on, and start again as soon as the indicator light goes out.

DRY IRONING

For ironing without steam, follow the instruction in section "steam ironing", however, the steam control turning knob should remain in position "O" (no steam).

CLEANING AND MAINTENANCE

- Always unplug the unit and allow it to cool before cleaning.
- Clean the outside of the appliance with a sponge or a slightly damp cloth.
- Never immerse the appliance in water or any other liquid!
- Never use abrasive products, wire brush or other sharp objects.
- After use, position the iron above a sink or container, Fill port down, and, empty the remaining water into the tank.
- Place the iron on its support base and set the thermostat to "MAX" heat for 2 minutes to evaporate the remaining water.
- Unplug the iron and allow it to cool before storing.

SELF-CLEANING

It is good to clean the iron every 10-15 days!

To do this :

Fill the water tank

Push the steam control knob to 0 position.

Set the thermostat to the "••• MAX" position

Connect the iron to the power supply.

Wait for the heating indicator light to come off.

When the light is off, unplug the power supply and position the iron horizontally above a sink.

Press the Auto Clean button, the water will drain from the steam spray holes of the soleplate.

When the water tank is empty and the water is no longer flowing, Run a soft cloth or damp sponge on the soleplate to remove residue.

Put the iron horizontally on a clean towel, on a stable support, until it becomes dry.

Check that the soleplate is dry before repositioning the iron on its base and storing it.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are:

- The invoice and

- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay!

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50-60Hz
Power	2000-2400W
Norm	Class I


Produced in PRC

The characteristics can change without prior notice.

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note: In the event of question concerning the earth or electric connection, please consult a qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

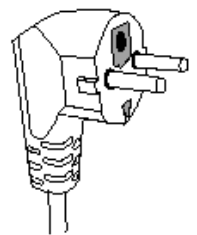

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**