

STEAM IRON

Instruction manual



TFV-2004



TFV-2008



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ The device is intended for use in domestic and similar applications such as:
 - Kitchen work area in shops, offices and other work environments.
 - Farms.
 - By customers of hotels, motels and other residential environments.
 - Bed and breakfast type environments.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Cleaning and maintenance must not be made by children without supervision.
- keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- This device is not a toy, do not leave children or people with disabilities to play with.
- In order to ensure children 's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person(*) in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The filling aperture must not be opened during use.
- The iron must be used and rested on a flat and stable surface.
- When the iron is put back on its stand, make sure that the surface that supports the iron-rest is stable.
- Never use the appliance outside and always place it in a dry environment.

- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.

(*) Competent qualified person: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs

SPECIFIC WARNING FOR IRONS

- Before placing the iron on its stand, always place the iron stand on a flat, stable surface.
- Always unplug the iron before filling
- After use, unplug the iron and place it on its stand on a flat surface.
- The iron must not be left unattended when it is connected to the main power.

WARNING: BURN HAZARD.

- During operation, the temperature of the appliance surface may be hot.
- The heating parts remain hot, long time after stopping the machine.
- The symbol "Hot Surface" warns the user that the apparatus walls may become hot, and to take precautions.



GENERAL INFORMATION

 
The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

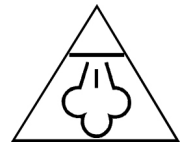

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



The symbol " CMIM " is the guarantee of compliance with optional harmonized Moroccan Standards, which reflect the essential requirements in terms of technical specifications.



These standards are not mandatory but ensuring compliance with the essential requirements.

For more information : <http://www.quefairedemesdechets.fr>

CLEANING AND MAINTENANCE

Before cleaning, always: switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

 
Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

- After using, lift the iron with the filling hole downwards to empty the remaining water from the Water tank.
- Insert the plug into the socket, and set the Temperature Control Dial to “MAX” for 1-2 minutes to evaporate the remaining water, and then unplug the iron and let it cool down before storing it.

LOCATION OF FUNCTIONS

1. Spray nozzle
2. Water tank
3. Steam button
4. Spray button
5. Temperature adjustment
6. Comfort handle
7. Indicator light
8. Rotatable electrical connector
9. Base to rest the iron
10. Stainless steel sole

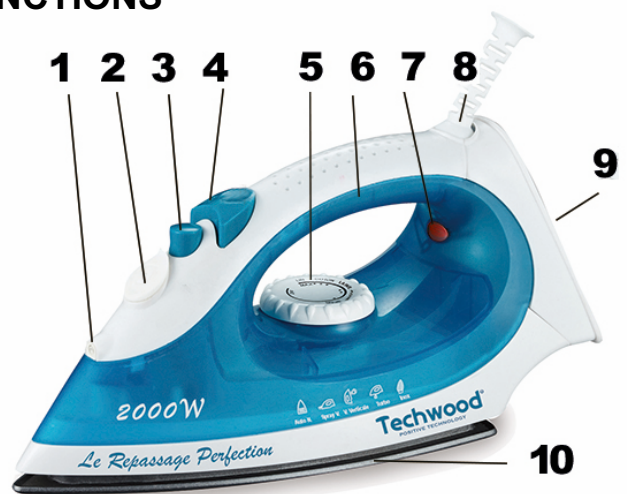

GENERAL INSTRUCTIONS

Specific fabrics (shiny, creased, relief, etc.) must be ironed at low temperature. Sort the laundry according to the ironing temperature: put the wool with the wool, the cotton with the cotton, etc ...

The iron heats up faster than it cools, which is why it is advisable to start ironing with laundry requiring the lowest temperatures, such as synthetic fibbers, for example.

TEMPERATURE SETTING

Follow the ironing instructions on the garment label. If there is no instruction but you do know the kind of fabric, please consult the following table.

Note: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.

Fabric	Temperature control	Temperature requirement
Synthetic	Low	
Silk	●	Low temperature
Wool	●●	Medium temperature
Cotton, linen	●●● MAX	High temperature

FILLING WITH WATER

Note: We recommend the use of distilled water.

- Set the steam control to the closed position.
- Hold the iron by the handle and tilt it 10° to fill it. Run water through the fill inlet.
- Clean the outside of the tank if water has leaked out of the tank.
- Always empty the water tank. After ironing.
- Tap water is usable. However, if the water in your area is very hard, it is advisable to use distilled water.

BEFORE THE FIRST USE

Before first use, remove the device and all accessories being careful. Clean the apparatus according to the instructions in "Cleaning and maintenance" paragraph.

Place the machine on a suitable flat, stable surface.

Fill the water tank (without exceeding the maximum level) before connecting it.

Plug the iron into a good electrical outlet.

Select the temperature ●● The indicator light comes on, indicating that the iron is starting to heat up.

When the desired temperature is reached, the light turns off and the iron is ready to use.

For this first use, make a test on a clean used cloth.

First, let the steam come out for at least 1 minute and press the express steam button and the spray button several times, to clean the tank of any manufacturing impurities.

Notes : During this operation a light smoke may emerge from the soleplate or iron for a few moments; This is normal.

During ironing, it is normal for the indicator light to come on and switches off automatically, in order to maintain a constant temperature.

It is always easier to iron fabrics or clothes slightly damp.

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.

- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

TEMPERATURE ADJUSTMENT

Low temperature for fabrics - Acrylic - Nylon – Polyester - Rayon – Synthetic
(= Synthétique)

- Average temperature for Silk (= Soie)
- Average temperature for Wool (= Laine)
- High temperature for Cotton and Linen (= Coton – Lin)

SPRAYING

- Press the spray button to spray water on clothes, as often as required.

Note: When using the water spray function, ensure that there is enough water in the water tank, and you may have to pump the spray button several times at first time you use the iron in order to start the spraying function.

EXPRESS STEAM

By pressing the "express steam" button, an intense jet of steam is emitted from the soleplate. This can be very useful, for example, when removing stubborn wrinkles.

Notes: The express steam button can be used, during Ironing, only at medium or high ironing temperature

In the vertical position, by pressing the express steam button, a powerful steam will come out of the iron.

This is useful for removing wrinkles from hanging clothes, curtains, etc.

STEAM IRONING

- Place the iron in a vertical position and set the temperature control dial at the minimum/low heat setting.
- Insert the plug into the socket, and then turn the temperature control dial to the "high heat" marking. The pilot light will come on, indicating that the iron is heating up.
- When the pilot light turns off, the set temperature has been reached and the iron is ready to use.
- During ironing, the pilot light on the iron automatically switches on/off as the thermostat maintains the set temperature (you may continue ironing during this process).
- Turn the steam control turning knob to the required position.

- Steam is produced as soon as the iron is held horizontally.

DRY IRONING

For ironing without steam, the steam button must be pushed down. (= no steam). As for the steam mode, select the temperature according to the nature of the fabric.

When the desired temperature is reached, the light goes out and the iron is ready to use.

SELF-CLEANING

It is good to clean the iron every 10-15 days!

The self-cleaning feature cleans inside the plate, removing impurities.

-Fill the water tank up to the maximum level indicated and set the steam selector at "0"

-Set the thermostat knob to the maximum temperature and wait for the light to turn off.

-Pull the plug out of the socket and hold the iron horizontally over a sink.

- set the steam selector at the last level until all the boiling water, steam, impurities come out.

-When the soleplate is cool, clean it with a damp cloth.

TIPS FOR A GOOD IRONING

We recommend using the lowest temperatures with fabrics with unusual finishes (sequins, embroidery, colours, etc.).

If the fabric is blended (Example : 40% cotton, 60% synthetic), set the thermostat to the temperature of the fiber requiring the lowest temperature.

If you do not know the fabric composition, determine the appropriate temperature by testing a hidden corner of the garment.

Start with a low temperature and gradually increase it until you reach the ideal temperature.

Never iron the areas showing traces of perspiration or other marks: the heat of the plate fixes the stains on the fabric and makes them irremovable.

To avoid marking garments of shiny silk, wool or synthetics, iron them inside out.

To avoid marking velvet clothes, iron them inside out, with the grain (following the grain) and do not press hard on the iron.

The fuller the washing machine, the more wrinkled the clothes will be. This also happens with a very high spin speed.

Many fabrics are easier to iron if they are slightly damp.

Like silk, for example, which should always be ironed wet, inside out.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE IN ACCORDANCE WITH REGULATIONS

Before being delivered, all our products are subjected to rigorous checks. This device is guaranteed for 24 months from the date of purchase of the product by the consumer.

The warranty documents are:

- the invoice and
- the warranty certificate (located on the side or the bottom of the box) stamped and completed.

Without these supporting documents, no free replacement or free repair can be made.

During the warranty period, we take charge, free of charge, for defects in the device or accessories, resulting from a defect in materials or workmanship by repair or replacement.

Services under the legal guarantee do not entail any extension of the guarantee period and do not give the right to a new guarantee.

In the event of a warranty claim, return the complete device to your dealer, in its original packaging, accompanied by proof of purchase.

The breakage of glass or plastic parts is, in all cases, your responsibility.

Wearing parts (for example: motor brushes, hooks, drive belts, spare remote control, spare toothbrushes, saw blades etc.) as well as their cleaning, maintenance or replacement, are not guaranteed. , and are therefore at your expense.

In the event of foreign intervention, the guarantee lapses.

After expiry of the warranty period, repairs can be carried out, against payment, by a specialist dealer or a repair service.

SPECIFICATIONS


Power supply	220-240V~ 50-60Hz
Power	1 850 – 2 200W
Norm	Class I

The characteristics can change without preliminary preventing

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note: In the event of question concerning the earth or electric connection, please consult a qualified personnel.

 In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

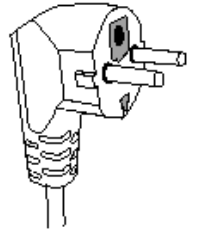

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

JUNE 2022