

TOASTER

Instruction manual



TGP-502



TGP-505



TGP-555



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have

- been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
 - Keep the appliance and its cord out of reach of children aged less than 8 years.
 - This device is not a toy; do not leave children or people with disabilities to play with.
 - In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
 - Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
 - From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
 - Never immerse the appliance in water or any other liquid for any reason whatsoever.
 - Never place it into the dishwasher.
 - Never use the appliance near hot surfaces.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person^(*) in order to avoid a hazard.
 - Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
 - Never use the appliance outside and always place it in a dry environment.
 - Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
 - Never use any other connector than the one provided.
 - Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
 - Never wind the cord around the appliance and do not bend it

- Ensure that the power cord does not come into contact with hot parts of this unit.
- Make sure the appliance has cooled down before cleaning and storing it.
- The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- The bread may burn. Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- Before cleaning, always unplug the appliance from the power supply and let it cool down.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Always remove the plug from the wall socket when the appliance is not in use.
- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.
- Regarding the instructions for cleaning surfaces in contact with food or and the removal of breadcrumbs, thanks to refer to the below paragraph "cleaning and maintenance" in manual

(*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

SPECIFIC SAFETY FOR THIS UNIT

Do not leave the appliance unattended (very dry bread can sometimes begin to burn in the toaster)

CAUTION : metal parts become hot !

Never insert fork, knife or any other object in the toaster !

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "HOT WALL" warns the user that the walls of the unit can become very hot, and to take precautions as required.

The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).

For more information : <http://www.quefairedemesdechets.fr>

TO KNOW IT'S UNIT

1. Large slots (2 slots)
2. Bread carriage handle
3. Cancel button
4. Browning control selector
5. Crumb tray (under the unit)



FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

Let the unit run without bread about 3 minutes to remove the protective layer of resistance.

For this, select the longest time. The light emission of smoke and smell is normal. It will be just for several minutes. Think to ventilate the room.

Clean the apparatus according to the instructions in "Cleaning" paragraph.

Place the machine on a suitable flat, stable surface.

USE

- Unroll the power cord completely.
- Check that the tension in force, in the country where you are, corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.
- Do not use or keep this product outside when it is raining.
- Certain parts of the appliance can get hot. Do not touch them, as you may burn yourself.

OPERATION

- Before using your appliance check if any object has fallen into the slot.
- For safety reasons, connect the appliance only to a mains earthed wall socket.
- Place the bread slices in the slot (for the French bread, cut a loaf shorter than the slot, then cut it in two pieces along its length.). Your appliance is provided to receive French bread, but also pieces of toast or other bread slices if their thickness and their length are shorter than the slot.
- Press down the bread carriage handle until it stops (in the same time, the grid inside the slot will tighten around the bread in order to keep it away from the heating wires). Then release the pressure and the handle will stay in the lower position, which means that the heating process has begun. If the handle comes up immediately, check if the appliance is plugged in as it blocks when the unit is plugged in.
- You can adjust the browning intensity to obtain a more or less toasted bread by positioning the browning control selector to one of the degrees marked from 1 to 5. Therefore, you only have to turn clockwise to increase the intensity, and anticlockwise to decrease it. The higher the number is, the more toasted the bread will be.
- During the functioning, if you think that the bread is toasted enough or for another reason, you can break the heating process, simply by pressing the cancel button.
- The reheat button allows you to reheat already toasted bread or to toast bread which is not toasted enough during a short time without modifying the browning degree.
- The defrost button allows you to toast the bread that has been frozen beforehand.
- Always unplug the appliance after use and let it cool down before handling or storing it.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

To remove the breadcrumbs:

Pull out the Crumbs tray (under the unit).

Clean the crumbs tray with a dry cloth.

Put the crumbs tray under the unit.

STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place and out of reach from children.

LEGAL GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.

In accordance with the duration of the legal guarantee of conformity, this device is guaranteed 24 months from the date of purchase by the consumer.

The proof of warranty is the purchase invoice.

Without this proof, no free replacement or free repair can be made.

During the period of the legal guarantee of conformity, we take, free of charge, the defects of the device or the accessories, resulting from a defect of materials or manufacturing by repair or replacement.

However, these services, within the framework of the legal guarantee of conformity, do not entail any extension of the duration of guarantee and gives no right to a new guarantee !

In case of recourse to the guarantee, bring back the complete apparatus to your retailer,

in its original packaging, accompanied by proof of purchase.

Defects in accessories, wear parts, glass or plastic parts resulting from breakage or misuse remain the responsibility of the consumer. In this case, cleaning, maintenance or replacement would not be guaranteed and would therefore be paid !

In case of foreign intervention, the warranty becomes void.

After expiration of the warranty period, repairs may be made, against payment, by the specialized trade or a repair service.

SPECIFICATIONS


Power supply	220-240V~ 50/60Hz
Power	1100-1300W
Norm	Class I

The characteristics can change without preliminary preventing

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note : In the event of question concerning the earth or electric connection, please consult a qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

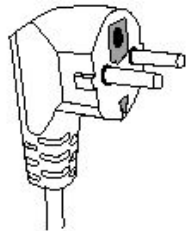

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

**Imported by Sotech International
" LE PERIPOLE " N°C111 à 115
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous bois - France**