

MANICURE / PEDICURE ON BATTERY SET

INSTRUCTION MANUAL



TMA-12

TMA-54



IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
 - Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance must not be made by children without supervision.
- In order to ensure your children's safety, please keep all

packaging (plastic bags, boxes, polystyrene etc.) out of their reach.


- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.
- This device, designed for home use, complies with standards relating to this type of product.

SPECIAL SAFETY FOR THIS UNIT

- This device is only suitable for filing and polishing nails of fingers and feet.
- Do not use this product for more than 20 minutes. Let cool 15 minutes before use.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

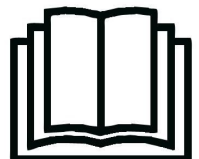

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>


CAUTION

1. Do not take baths using the unit
2. Do not cover the feet or hands cream before use but after.

3. Turn the unit on with the button on the top of the handle.
4. Place the accessory gently on the desired location.
5. Regularly check the progress of the various stages of device operation to avoid injury.

TO KNOW ITS UNIT

1. Rounded Nail file for cuticle and small skin
2. Nail file, round and fine
3. Finishing Nail file
4. Nail file for hard nails
5. Cone polisher to treat calluses
6. Lime cone for cuticles and skin
7. Accessory holder
8. Opening button of the case
9. Speed selector / switch
10. Storage box

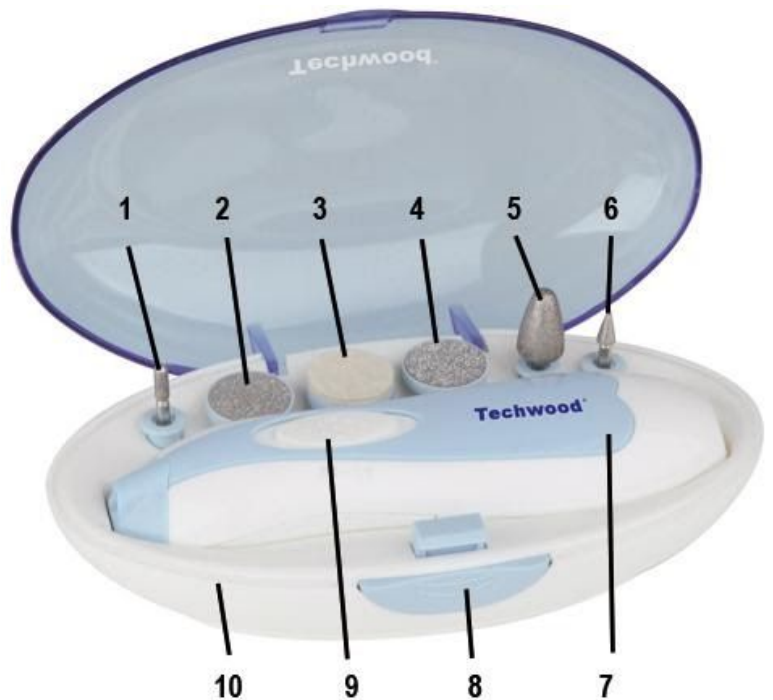

USE

1. Insert the batteries (not included) into the battery compartment.
Take care of the polarity.

2. The device manicure and pedicure is now ready for use.

3. Attach the desired accessory on the support (handle) and start manicure or pedicure.

Two speeds are available and invertible. They can be selected using the selector switch.

NOTE : Better results can be achieved if pedicure feet are washed before processing.

Important ! Stop Manicure / Pedicure, from time to time, to check the result.

This is especially important for diabetics because they often suffer from desensitization of the surface of the skin and may be injured.

The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.

Never modify the appliance in anyway.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance, and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

STORAGE

- Ensure the unit is completely cool and dry.
- Keep the appliance in a cool, dry place.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supplier 2 x1,5V A6 or AA batteries (not provided)

Norm Class III

Made in PRC

The characteristics can change without prior notice

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable.

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

ENVIRONMENTAL PROTECTION

(Destruction of batteries)

To remove the batteries:

- Open the battery compartment and retrieve the batteries.
- THE BATTERIES MUST BE ELIMINATED IN A SAFE WAY.
- DO NOT THROW IN A TRASH CAN, BUT GIVE IN CENTRE OF WASTE.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous bois - France**