

STEAM MOP

Instruction manual

TNV-111D



TNV-119D



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- This appliance shall not be used by children.
- This device is not a toy, do not leave children or people with disabilities to play with.
- Cleaning and maintenance must not be made by children.
- Keep the appliance out of reach of children when it is energized or cooling down.
- The appliance shall not be left unattended while it is connected to the supply mains;
- The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking;
- The appliance shall be unplugged after use and before carrying out user maintenance on the appliance.
- The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.

- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.

- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.
- ❑ This appliance is only intended for household use.
- ❑ Never direct steam towards people, animals or plants, or equipment containing electrical components such as the interior of ovens.
- ❑ Caution: Danger of scalding.

(*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

GENERAL INFORMATION

 
The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

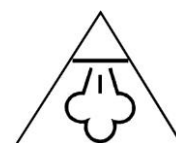

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting





the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol "IPx4" means the product is suitable for all weather conditions and resists to strong water splashes. From any direction. However, it does not withstand immersion.

The symbol "HOT SURFACE" warns the user that the walls of the unit can become very hot, and to take precautions as required.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

The symbol " CMIM " is the guarantee of compliance with optional harmonized Moroccan Standards, which reflect the essential requirements in terms of technical specifications. These standards are not mandatory but ensuring compliance with the essential requirements.



Do not use the steam mop outdoors.

 
WARNING: DANGER OF SCALDING!

Beware of escaping steam when operating the unit. The steam is hot and may cause severe burns if it comes in contact with bare skin!

FIRST USE

Before first use, remove the device and all accessories and being careful with sharp accessories.
Clean the apparatus according to the instructions in "Cleaning and maintenance" paragraph.
Place the machine on a suitable flat, stable surface.
Ensure that all the parts are correctly assembled before operation.
Do not use the steam mop without the floor cloth in place.
Do not use it without water in the water tank.
Place the appliance on a flat surface when operating to avoid overturning.
Do not insert any objects into openings. Do not use with any opening blocked.
Do not use any detergents in the water tank for cleaning, only use water.
Never direct steam towards people, animals or plants, or equipment containing electrical components such as the interior of ovens.

TO KNOW ITS UNIT

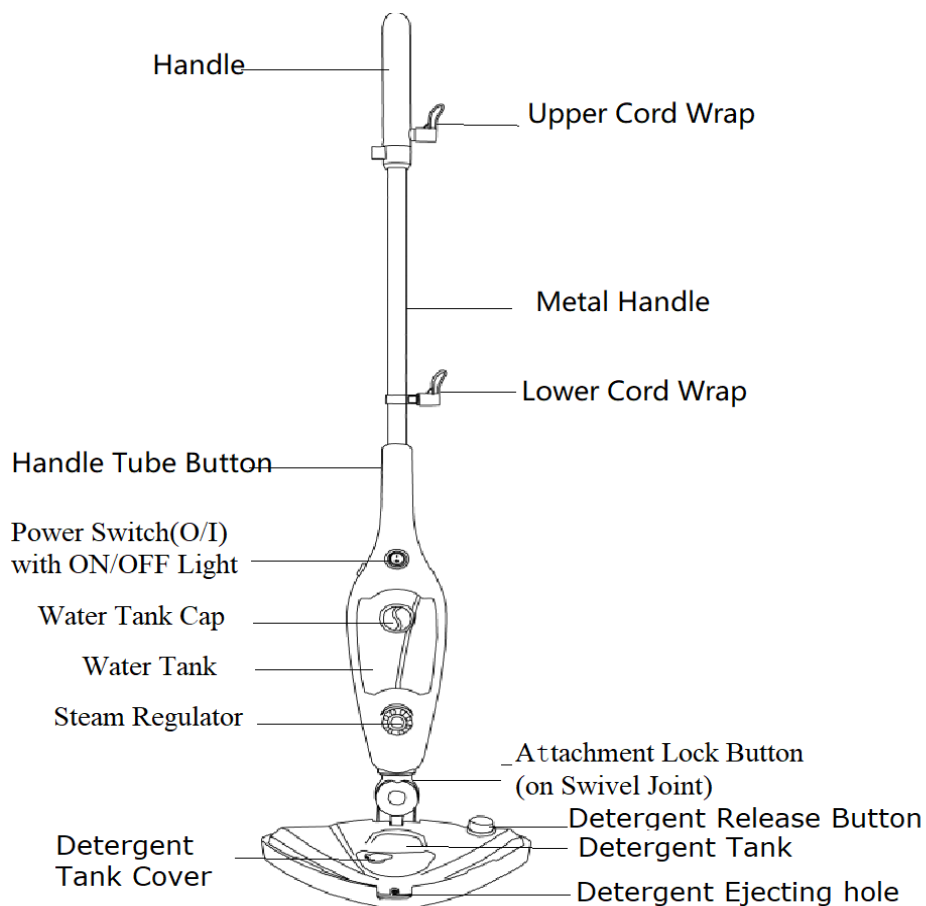


ASSEMBLING THE STEAM MOP


Before assembling the steam mop, make sure the power switch is in “OFF” position



 Connect the parts as shown below:

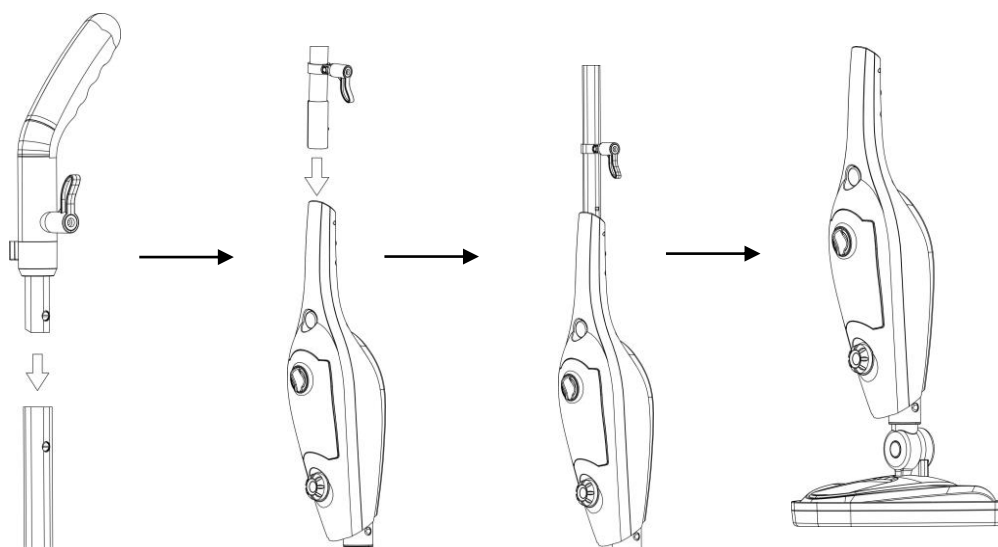

 - 1) Insert the Swivel Joint into designated connection hole in the Main Body.
- 2) Put the Microfiber Cloth Pad onto the mop head. Fasten the Pad by tightening the drawstring with the toggle
- 3) When using on carpet surfaces: Place the Mop Head, with Microfiber Cloth in place, on top of the carpet glider.
- 4) When clean grease or oil etc. surface purpose, pls add the detergent into the Detergent Tank.

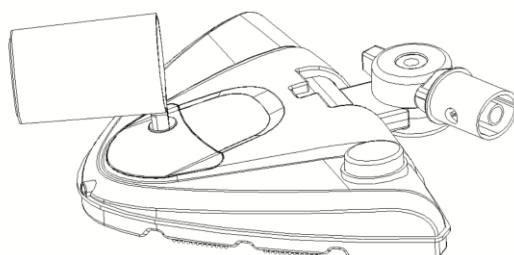

TO USE AS A HAND STEAM CLEANER

 
1. Press handle tube button to remove the handle from main body.
2. Install the accessory adaptor on the main body, until it is into place.
3. Choose the appropriate accessories (check accessories use list), according to arrow indicator to align and implant to accessory adaptor, then turn anticlockwise, until it into place.

NOTE : to remove accessory adaptor, Press salient point on the accessory adaptor.


HOW TO USE

1) Fill the Water Tank with water:

- a) Open the Water Tank Cap by counterclockwise rotation
- b) Use the Measuring Cup to pour the water into Water Tank

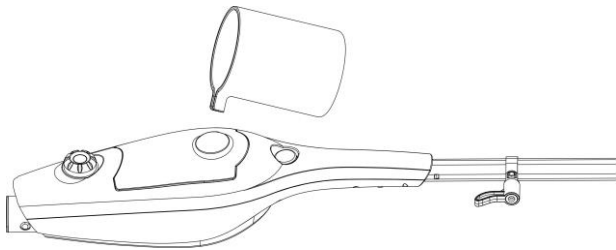

(b)

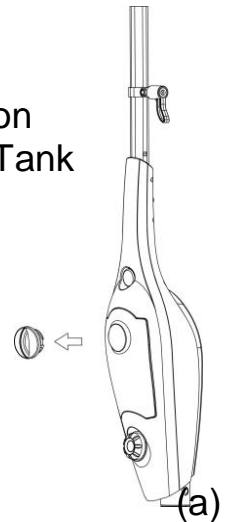 

(a)

 
2) Select appropriate Steam Regulator positions:

Steam volume will be bigger when turn Steam Regulator Knob clockwise, and counterclockwise to reduce. User can adjust steam volume according to different objects.



NOTICE:steam volume control by PCB,It will takes 3 seconds adaptation time.When you adjust steam volume .It is normal phenomenon.

When normal cleaning,the steam head has big rotary angle, can clean corners and also can clean low space.

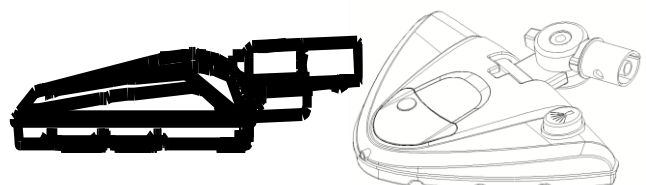

3) Once the unit has been fully assembled and filled with water, plug in the Power Cord to a grounded electrical outlet. Power Switch (O/ I) is in the OFF(O) position, turns the Power Switch (O/ I) to the ON(I) position. Approximately 20 seconds, the Mop will start emitting steam. Adjust the steam regulator and choose the approximate steam output amount according to your requirement..

To stop emitting steam, turns the Power Switch (O/ I) to the OFF(O) position.

It is normal that a little water maybe ejected from nozzle before steam starts

4) Slowly pass over the surface to be cleaned. The absorbent mop cloth picks up the dirt loosened by the steam. Apply steam liberally. Keep a towel handy and wipe away any excess water that may accumulate.

5) When the steam mop stops emitting steam, simply turn OFF and unplug the appliance, refill the Water Tank and continue cleaning.

NOTE: It is recommended that another high wattage appliance is not operated on the same circuit to avoid a circuit overload.

CAUTION: To sanitize an area of your floor, leave the Steam Mop over area for a minimum of 8 seconds, but no longer than 15 seconds. Leaving the Steam Mop in a stationary position for a longer period than recommended may cause the build up of a pale residue. This residue can be removed by using a decalcifying product or with a few drops of vinegar. (See troubleshooting guide)

WARNING: NEVER run the Steam Mop without water. NEVER direct steam at any person or animal. Use the Steam Mop on sealed hard floor only.

9) When you finish your cleaning, unplug Power cord from outlet, empty the Water tank, carefully remove the cloth Pad from the head, wind Power Cord around the Cord Wrap and store it upright in a dry area or hang by the storage hook.

CAUTION: The Cloth Pad may be very hot.

Not for space heating purpose.

Warning:

1) Don't use the steam mop without Microfiber Cloth Pad on the mop head

2) Only attach the Carpet Glider to the Mop head when you clean the Carpet. Carpet Glider is not used for the floors except Carpet.

 
3) When clean any sealed wooden floors, especially sealed lacquered floor, use extra caution, pls clean small areas as an experiment in order to avoid scratching and damage of floors.

HAND-HELD STEAMER




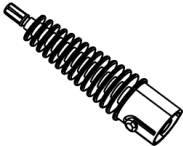 
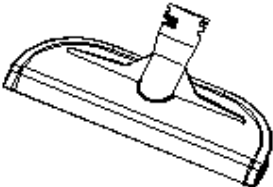 
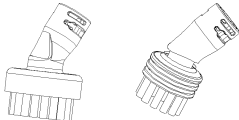 
 
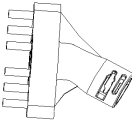 
 
The Hand-Held Steamer is an ideal portable cleaner for use on work surfaces, counter tops, sinks, windows, mirrors, tiles and spot cleaning on floors, carpets and rugs. Use it with the Angle Nozzle, Brushes attachments to spray away dirt, grease, mold and more.


HOW TO ASSEMBLE HAND-HELD STEAMER

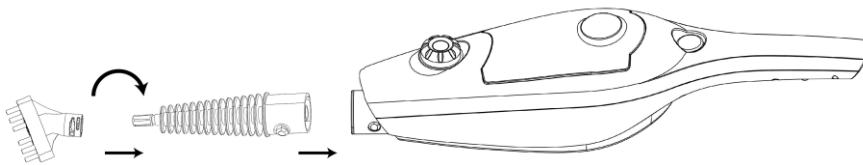- 1) Press handle tube button, remove the handle from main body
- 2) Press Attachment Lock Button (on the Swivel Joint), remove the mop head from the main body.
- 3) Press the Attachment Lock Button on the Accessory Adaptor and install the Accessory Adaptor at the top of main body, until it into place.
- 4) Choose the appropriate accessories (check accessories use list), to align and implant to Accessory Adaptor, then turn clockwise, until it into place..
- 5) Press the Attachment Lock Button on the Accessory Adaptor to remove the Accessory Adaptor from the main body.



ACCESSORY LIST

CAUTION!		
Before cleaning any electrical appliance, check and follow appliance manufacture's cleaning guidelines.		
ACCESSORY	PICTURE	SUGGESTED USE
Carpet Glider		Used on the carpet
Microfiber Cloth		For general cleaning of hard floors and refreshing carpets.
Measuring Cup		Add water
Accessory Adaptor		<ol style="list-style-type: none"> 1) Clean stove tops, around faucet edges, grout, microwaves, sinks, hard to reach areas, etc. 2) Attach the following accessories to the main body
Window Squeegee/Garment Steaming Tool		<ol style="list-style-type: none"> 1) Clean shower glass doors, mirrors, glass, removing soap scum and grime. 2) After put the Garment Steamer Cloth, it can take wrinkles out of garments, steaming draperies, tablecloths, and more.
Small and Medium Scrub brushes		Clean oven, microwaves, stove tops, showers, bathtubs, faucet fixtures, tile, grout, toys, refrigerators, etc.
Angle Nozzle		Clean stove tops, around faucet edges, grout, microwaves, sinks, hard to reach areas, etc.
Grout cleaning Tool		Cleaning all grout lines, sanded or non-sanded.
Scraping Tool		Scraping baked on food, grime, and grease. Removing residue or other difficult

		substances from surfaces, such as stove tops and ovens
Garment Steamer Cloth		For use when steaming garments, draperies, tablecloths, etc.

USING THE STEAM MOP

The easy, environmentally friendly way to clean your floors.

No chemicals

Thoroughly cleans and sanitises floor surfaces without any chemicals.

No elbow grease

Easily removes dirt and grime from hard floors or carpets, leaving them hygienically clean without the need for hard physical labour.

Tap water only

Designed for use with plain tap water that is converted into steam. (Distilled or purified water is recommended for use, ONLY in hard water areas.)

Reusable cloths

Comes with two re-usable, highly absorbent microfiber cloths that can be machine-washed in hot water and tumble dried.

Use on most hard floors

Designed for use on hard surfaces that will withstand high heat, including ceramic tiles, marble, stone or linoleum floors and on sealed hardwood or parquetry floor (However, see cautions below).

Use on carpet and rugs

Designed for use with the supplied carpet glider on carpet and rugs that will withstand high heat.

Do not use the steam mop on unsealed wood floors.

Do not let the steam mop stand on any wood floor for an extended period of time.

Note : This could cause the wood grain to expand.

Test an isolated area of the surface to be cleaned before proceeding.

Take extra care when using the steam mop on surfaces that have been treated with wax, as the heat and steam may remove the wax or the sheen.

Take extra care when using the steam mop on vinyl, linoleum or any other heat-sensitive floors, as too much heat can melt the glue on the floor.

We recommend cleaning a small sample first in an inconspicuous area of the floor and checking the floor manufacturer's use and care instructions for the surface to ensure suitability for steam cleaning.

WARNING

**Never run the steam mop without water.
Never direct steam at any person or animal.**

Before you start steam cleaning your floors, make sure:

1. The surfaces to be steam cleaned have been swept or vacuumed.
2. The steam mop is fully assembled (see Assembling paragraph).
3. The microfiber cloth sits tightly around the steam head.
(Do not use the mop without the microfiber cloth!)
4. The water tank is filled.
(Do not add cleaning solution, only use tap water, or distilled/purified water.)

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

Turn on the power switch, power indicator Light, the unit starts heating.

NOTE : It takes approximately 30 seconds for the unit to heat up and the steam to be ready.

Push the unit along the floor, Forward and backward.

When the water level in the water tank is low, Turn off the power switch immediately.

Unplug the unit from the electrical outlet and refill the water tank following the Instructions.

NOTE : If you use steam mop for a long time, the cloth sleeve may become very wet or dirty & will need to be replaced.

Turn off the unit & allow to cool before replacing.

NOTE : While replacing cloth sleeve don't touch steam head to avoid scalding.

To sanitize a specific area of your floor, position the steam mop over the area for a minimum of 8 seconds, but no longer than 15 seconds.

NOTE : The steam temperature will reach approximately 90-110°C. This is particularly useful for cleaning bathroom, shower, pet sleeping area or around garbage bins.

AFTER USE

- 1) Unplug Power Cord from outlet.
- 2) Allow Mop Pad/Cloths to cool down and carefully remove cleaning cloth from mop Head, as cleaning cloth could still be hot.
- 3) Any water remaining in the Water Tank should be emptied prior to appliance storage. Always empty the Water Tank at the end of each use.
- 4) Let any water (that may remain as a product of condensation) drain from the steam opening prior to storing the appliance.
- 5) Wrap Power Cord around Upper and Lower Cord Wrap.
- 6) Wipe all surfaces of the steam mop with a soft cloth. Store in a protected, dry area.
- 7) Please store the unit in a cool and dry place when not in use. Do not leave it exposed to sunlight or rain.
- 8) Upright storage of the steam mop with a wet Mop Pad/Cloth may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar. Make sure to remove the Mop Pad/Cloth before storage.

CLEANING AND MAINTENANCE

Before cleaning, always: switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) can be washed in hot water with sponge and soft detergent.

Never plunge the apparatus in water or any other liquid!

Do not use abrasive cleaners, gritting, or metal brush or any other cutting object.

STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

 
In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note : In the event of question concerning the earth or electric connection, please consult a qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

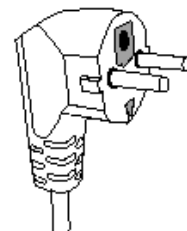

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

SPECIFICATIONS

Power supply 220-240V~ 50/60Hz
Power 1300W
Norm Class I; IPX4

Made in PRC

The characteristics can change without prior notice.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**