

## DIGITAL KITCHEN SCALE

### INSTRUCTION MANUAL

**TPA-521**



**TPA-522**



**TPA-523**

 
 
Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.



## IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Only use the appliance for domestic purposes and household or similar applications such as:
  - staff kitchen areas, in shops, offices and other working environments;
  - By clients in hotels, motels and other residential type environments;
  - Environment type like :
    - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- ❑ This device is not a toy, do not leave small children or people with disabilities to play with.
- ❑ Cleaning and maintenance must not be made by children without supervision.
- ❑ In order to ensure children 's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- ❑ Caution ! Do not allow small children to play with the foil :  
**THERE IS A DANGER OF SUFFOCATION !**
- ❑ Never immerse the appliance in water or any other liquid for any reason whatsoever.
- ❑ Never place it into the dishwasher.
- ❑ Never use the appliance near hot surfaces.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage.
- ❑ Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.
- ❑ This appliance is only intended for household use.

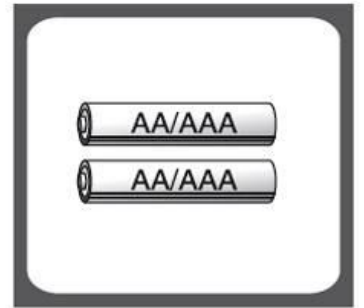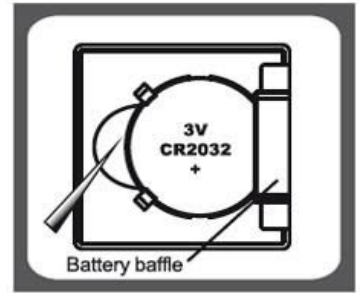

## Installing or replacing batteries

 
If 1 X 3V DC Lithium battery (CR-2032) is required, it is provided with the unit. Remove the guard before installation. Install the battery with + on the top.

If 2 x LR3 or LR6 (AAA / AA) batteries are required, they are not supplied with the unit. Purchase the corresponding battery type, Remove the protection before setting up. Respect the polarity.

- Open and remove the housing cover.
- Remove (if necessary) the used battery (s).
- Place the new battery (s) in the battery compartment.
- Close the cover.

## TO KNOW IT'S APPARATUS

1. Tare
2. Zero
3. Negative sign
4. Mode function : Weight, Water, Milk  
(See logos bellow)
5. Unit weight : kg / lb : oz  
(kilogram or pound or ounce)
6. Volume unit : ml (millilitre)
7. Volume Unit : fl' oz (liquid ounce)
8. Unit of weight: Lb / Oz  
(pound / ounce)

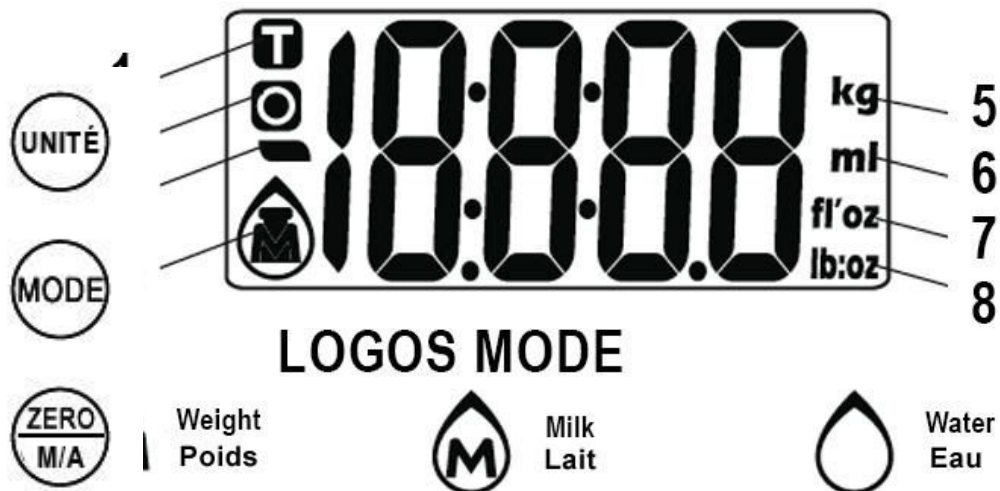

## KEYS FUNCTIONS

 
Each pulse changes the unit display.  
**(This key is often on the back of the device)**

Each pulse changes the working mode.  
(Weight => Water => milk)

On / Off, Reset, Tare.

## CONVERSION OF UNITS

Each time the unit key is pressed, it goes from g to Lb then back.

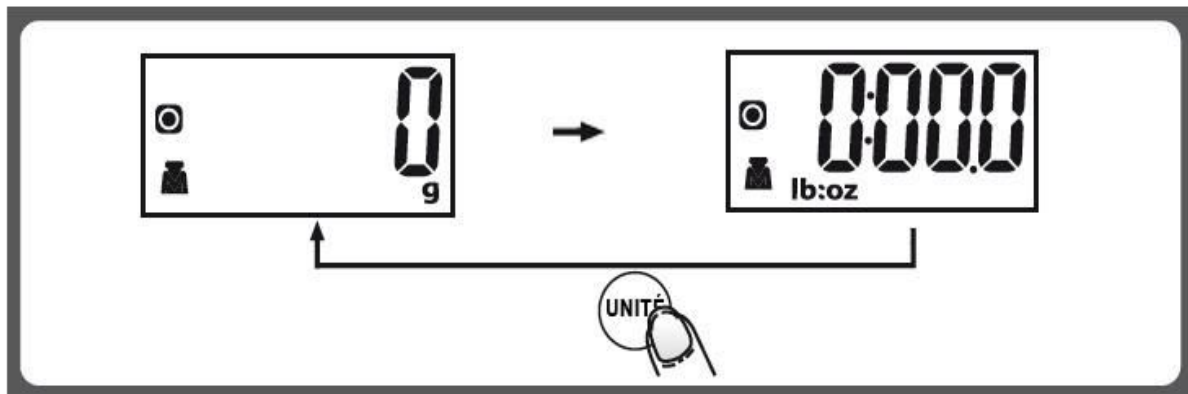


*Note: If the scale has two units of metric system, gram (g) and pound (lb : Oz),*

- *By choosing grams as the unit of weight, the default volume unit will be Millilitre (ml).*
- *By choosing pound as the unit of weight, the default unit of volume will be Fluid ounce (Fl-oz).*

## MODE FUNCTION

 Each time the Mode key is pressed, the unit changes :  
1 Weight => 2 Water => 3 Milk => return to weighing by weight.

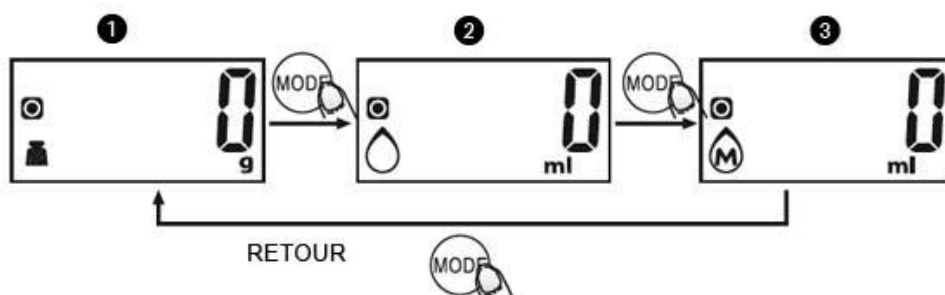



## USE

Before using the product for the first time, clean it with neutral detergent and a damp cloth or sponge.

Rinse, & dry it.

### ZERO BUTTON FUNCTIONS

#### - **On / Off**

Ensure the scale is well placed on a flat surface and lightly press the "Zero" button.

*Note : The scale will automatically turn off after 2 minutes of no use.*

#### - **Tare Function**

Place a bowl on the scale. The screen shows the weight of the bowl.

Press the "Zero" button. The number "0" appears on the display.

*Note : For weighing without the bowl, remove the bowl and press "Zero".*

To add an ingredient, after the 1st weighing, Leave the bowl on the scale and press "Zero" again ; The unit will reset to 0 allowing to add the desired ingredient. If necessary, to add other ingredients, press "Zero" again.

#### - **Overload**

The scale will display "Err" symbol (Error) if loads on the scale plate exceed the max weight allowed.

#### - **Battery**

The scale will display "Lo" symbol if it the battery is discharged. If so, replace the scale battery.

### CLEANING AND MAINTENANCE

- Clean the outside of the apparatus with a sponge or slightly wet linen.
- The parts in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.
- Never plunge the apparatus in water or all other liquid !
- Never use gritting, of metal brush or another cutting object.
- Do not use abrasive cleaners.
- Keep the appliance in a cool, dry place.



## GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase of consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box).

Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee !

In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted.

Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

## SPECIFICATIONS

Power supply      1 x 3V DC battery CR-2032 (provided)

Capacity            5Kg

Possible Unity    g, ml, livre (lb), Oz, fl : Oz.

Made in PRC

*The characteristics can change without prior notice.*

## **ENVIRONMENTAL PROTECTION**

(Destruction of batteries)

- Open the battery compartment and retrieve the battery.
  - THE BATTERY MUST BE REMOVED BEFORE THE UNIT IS GIVEN TO REBUS.
  - BATTERY CONTAINS NICKEL CADMIUM AND / OR LITHIUM AND / OR NICKEL-METAL HYDRIDE, THE BATTERY MUST BE ELIMINATED IN A SAFE WAY.
- DO NOT THROW IN A TRASH CAN, BUT GIVE IN CENTRE OF WASTE.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International  
" LE PERIPOLE " N°A-107  
33, Avenue du Marechal de Lattre de Tassigny  
94120 Fontenay sous-bois – France**