

## DOUBLE HOT PLATE

### INSTRUCTION MANUAL



**TPE-2501**



**TPE-2506**



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

## IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ The device is intended for use in domestic and similar applications such as:
  - Kitchen work area in shops, offices and other work environments.
  - Farms.
  - By customers of hotels, motels and other residential environments.
  - Bed and breakfast type environments.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose.
- ❑ No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years of age.
- This device is not a toy, do not leave children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :  
**THERE IS A DANGER OF SUFFOCATION !**
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person<sup>(\*)</sup> in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Never wind the cord around the appliance and do not bend it
- Ensure that the power cord does not come into contact with hot parts of this unit.

- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc... & the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a table or flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ This appliance is only intended for household use.
- ❑ Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.

(\*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs

## GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "HOT SURFACE" warns the user that the walls of the unit can become very hot, and to take precautions as required.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



The symbol "CMIM marking" is the guarantee of compliance with the harmonized Moroccan Standards, optional, which translate the essential requirements into technical specifications. These standards are not mandatory but guarantee compliance with the essential requirements.



For more information : <http://www.quefairedemesdechets.fr>

### **WARNING: BURN HAZARD.**

- During operation, the temperature of the appliance surface may be hot.
- The heating parts remain hot, long time after stopping the machine.
- The "Hot Surface" symbol warns the user that the apparatus walls may become hot, and to take precautions.



## CLEANING AND MAINTENANCE

1. Always unplug unit from electrical outlet and allow to cool before cleaning.
2. Never immerse in water or any else liquid.
3. Use damp soapy cloth or sponge to clean surface of hotplate, chrome burner ring, drip pan and base. The sponge or cloth should only be damp without water dripping to avoid water leaking into the hotplate.
4. Do not use abrasive cleaners, gritting, or metal brush or another cutting object. Wipe after washing.

*Note: it is possible to use soapy water.*

This appliance is fitted with a safety thermostat. When the plate heats up for a while, the temperature may be too high compared to the operating temperature. In this case, the plate switches off automatically to lower the temperature. After a few moments, it will turn back on. This phenomenon can be repeated as often as necessary.

## MOUNTING THE HANDLES

1. Turn the baking tray over and place it on a soft, flat surface.
2. Position a handle on the side of the plate, matching the holes in the handle with the holes in the plate. (Fig.1)



Fig. 1

1. Take 2 screws (provided) (1) and position them in the holes (2) provided for this purpose. (Fig.2)

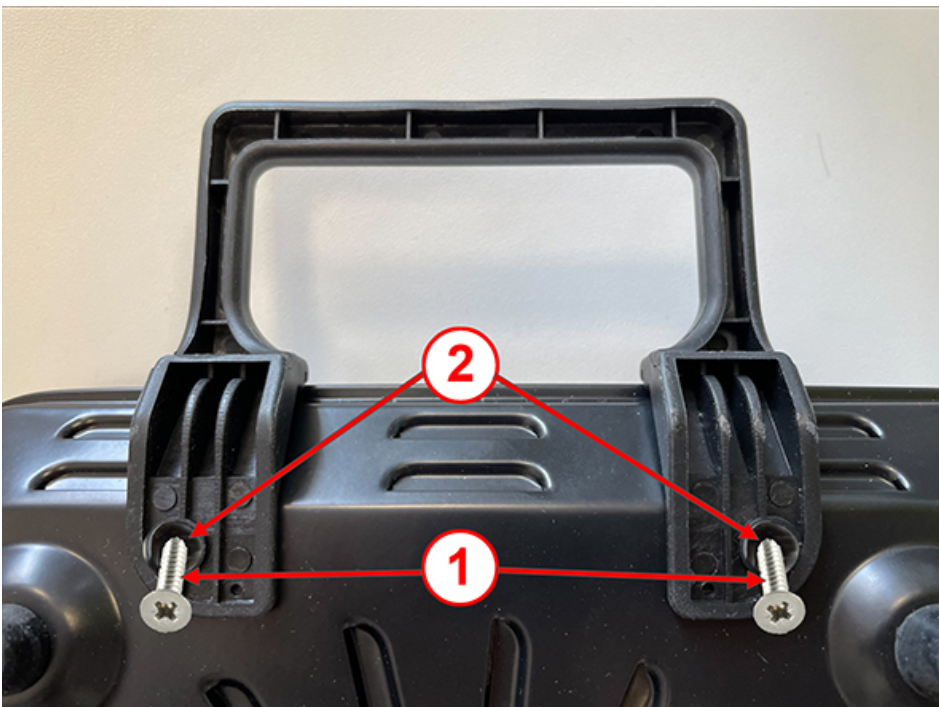


Fig. 2

2. Using a Phillips screwdriver, tighten the screws. (Fig.3)  
Note: do not force it at the end of screwing so as not to break the plastic of the plate.



Fig. 3

3. Repeat the operation with the second handle.  
Note: When fitted, these handles are fixed.

## FIRST USE

- Unroll the power cord.
- Check the voltage in the country where you are matches that indicated on the unit.
- Ensure that the unit is in the off position before plugging in.
- Plug into a power outlet in good condition, and grounded, to avoid any danger.
- Disconnect the mains power cable before maintenance cleaning operation and installation of accessories.
- Always place the unit on a table or horizontal flat surface.
- Never modify the device.
- Warm up the plate for about 5 minutes to remove the protective product.  
Note: There may be a little smoke clears, this is normal and will pass soon.
- Remember to ventilate the room.
- The cooking utensil used (pot, pan etc.) must under no circumstances be larger in diameter than the plate.

## OPERATION INSTRUCTIONS

To keep the food at a constant hot temperature, turn the heating selector(s) to 2.

*Notes : By positioning the knob on 0 (OFF) the food will remain hot for a while (+/- 30 minutes), as the plate cools down gradually.*

*When the device is not in use. Make sure that the thermostat is on 0 (OFF) and disconnect the plug from the socket.*

To cook food, turn the heating selector, on one or both plates, to the desired power, from 2 to 5.

“MIN”        => 2        LOW (Reheat, keep warm)

“MAX”        => 5        STRONG (Cook, sear, heat quickly)

During cooking, do not touch the appliance, risk of burns.

### TIPS

It is possible to use any kind of container : pan, frying pan, etc. ; Ceramic, or metal such as stainless steel, aluminum, copper, etc.

Never use a glass container.

The container should be flat bottomed.

The diameter of the flat bottom should not be larger than the plate, but the base should be slightly larger than the surface of the griddle.

Do not use with base that sticks to plate, is concave or uneven.

### STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place.

### GUARANTEE IN ACCORDANCE WITH REGULATIONS

Before being delivered, all our products are subjected to rigorous checks.

This device is guaranteed for 24 months from the date of purchase of the product by the consumer.

The warranty documents are:

- the invoice and
- the warranty certificate (located on the side or the bottom of the box) stamped and completed.

Without these supporting documents, no free replacement or free repair can be made.

During the warranty period, we take charge, free of charge, for defects in the device or accessories, resulting from a defect in materials or workmanship by repair or replacement.

Services under the legal guarantee do not entail any extension of the guarantee period and do not give the right to a new guarantee.

In the event of a warranty claim, return the complete device to your dealer, in its original packaging, accompanied by proof of purchase.

The breakage of glass or plastic parts is, in all cases, your responsibility.

Wearing parts (for example: motor brushes, hooks, drive belts, spare remote control, spare toothbrushes, saw blades etc.) as well as their cleaning, maintenance or replacement, are not guaranteed. , and are therefore at your expense.

In the event of foreign intervention, the guarantee lapses.

After expiry of the warranty period, repairs can be carried out, against payment, by a specialist dealer or a repair service.

## SPECIFICATIONS

Power Supply	220-240V~ 50 - 60Hz
Power	1 500W + 1 000W = 2500W
Norm	Class I


Made in PRC

*The characteristics can change without prior notice.*

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

*Note : In the event of question concerning the earth or electric connection, please consult a qualified personnel.*

*In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.*

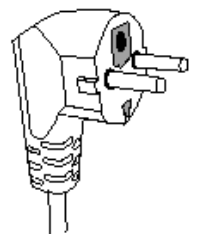

**CAUTION:** In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

JANNUARY 2023