

**“RAP’ TOUT”
MULTIFUNCTION FOOD PROCESSOR
INSTRUCTION MANUAL**



IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like : • Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- ❑ This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction

concerning use of the appliance in a safe way and if they understand the hazards involved.

- This device is not a toy , do not leave children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

- Caution ! Do not allow small children to play with the foil :

THERE IS A DANGER OF SUFFOCATION !

- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person^(*) in order to avoid a hazard.

- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Never wind the cord around the appliance and do not bend it

- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
 - ❑ Make sure the appliance has cooled down before cleaning and storing it.
 - ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
 - ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
 - ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
 - ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
 - ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
 - ❑ Always remove the plug from the wall socket when the appliance is not in use.
 - ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
 - ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
 - ❑ This device complies with standards relating to this type of product.
- (*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

The symbol "TUB / SHOWER" crossed out means to never use the unit in a bathroom, a shower in or near water spray. (IP20 Minimum distance 3M.)

The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).

For more information : <http://www.quefairedemesdechets.fr>

CAUTION: RISK OF BURN.

- During operation, the surface temperature of the unit may be hot.
- The heating elements remain warm for a long time after the appliance is switched off.
- The "HOT SURFACE" symbol warns the user that the walls of the appliance may become very hot and to take the necessary precautions.



SPECIAL WARNING FOR FOOD PROCESSOR & CHOPPER

Caution !

- Always disconnect from power supply if it is left unattended and before assembling, disassembling or during cleaning.
- Switch off the appliance and disconnect from supply before changing accessories approaching parts that move in use.
- Potential injuries can occur with misuse. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning, as they are extremely sharp.
- Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
- Regarding the instructions for the use of accessories, operation times and speed settings, refer to the below paragraphs.
- We suggest giving exact operating times and speed settings (if applicable) for accessories in manual.
- Potential injuries can occur with misuse. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning, as they are extremely sharp.
- During operation, ensure that the device is not used continuously for too long and also ensure a sufficient rest time between two operations.

BEFORE THE FIRST USE

- Unpack the unit.
- Clean the appliance.
- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Stand the appliance on a table or flat surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped & if there are visible signs of damage or if it is leaking.
- Never modify the appliance in anyway.

KNOWING ITS UNIT

1. Pusher
2. vegetable Entry
3. On / Off switch
4. Base + Engine
5. Cone holder
6. Clamping screw of the cone on unit
7. Cutter cone
8. Different types of cones



ACCESSORIES

Green cone : to cut thin slices smooth.

Blue cone : to cut thick and wavy slices.

These accessories are suitable for cutting, for example : carrots, zucchini, potatoes, cucumbers, peppers, onions, turnips, red cabbage, white cabbage, potatoes or hard cheese.

Orange Cone : fine grater.

This accessory is suitable for finely grate, for example, carrots, zucchini, hard cheeses (like Parmesan), chocolate or coconut.

Cone Red : Big grater.


This accessory is suitable for finely grate, for example, carrots, zucchini, potatoes, peppers, hard cheese (parmesan) or baking chocolate.

Yellow cone: for grinding ingredients

This accessory is suitable, for example, for grinding dried fruits such as hazelnuts, walnuts, almonds or coconut. It can also grind hard cheese (parmesan), chocolate or other hard and dry ingredients.


INSTALLING THE CONE HOLDER

1. Maintain inclined the cone holder (a quarter turn to the right) and insert it into the unit engine. on the front side.
2. Turn the cone holder (a quarter turn) to the left until it clips.
3. To remove the cone holder of its location on the drive shaft, Rotate a quarter turn to the right and remove it from the engine block.

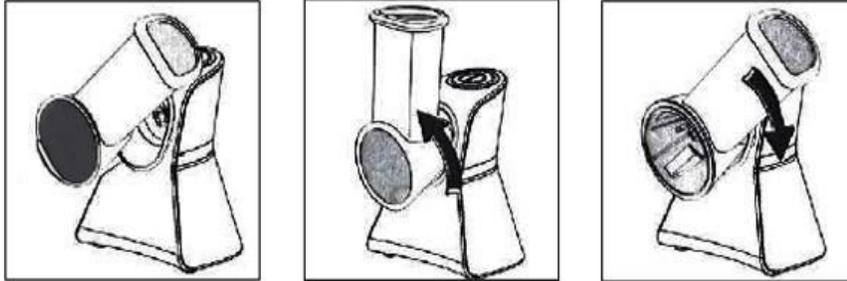


CONE INSTALLATION

1. Ensure that the cone holder is in place and secured.
2. Select the cone suitable for intended use.
3. Unscrew and remove the screw cone of the axis.
4. Insert the cone in the cone holder by checking the position of the axis.

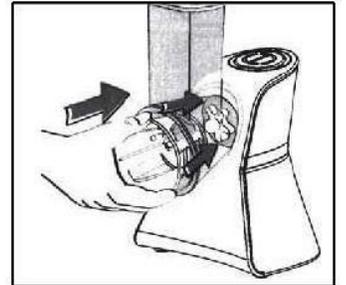

5. Screw fastener (to the left), to secure the cone.
- Note: the cone should not be free on its axis if properly installed.
6. After use, to remove the cone (which is in place), turn the central fastening element in clockwise direction, take it out and remove the cone.
 7. Clean the parts as described below, rinse, dry and replace the fastener to avoid losing it.

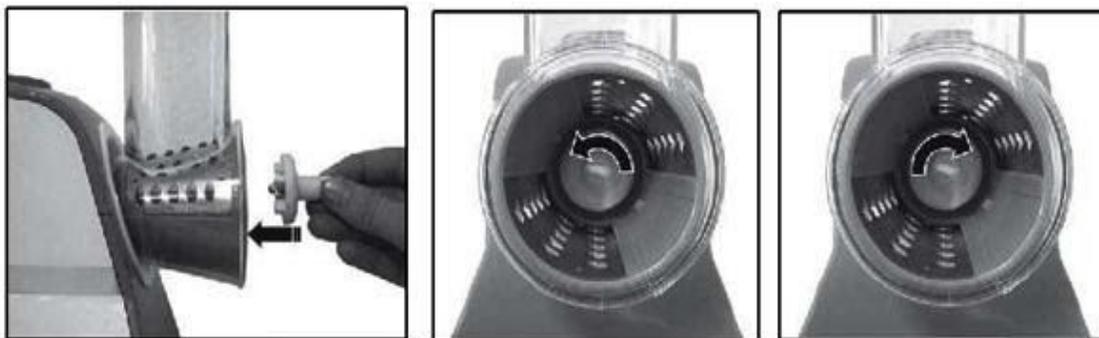

USE

1. Place the unit on a flat level, slip if possible.
2. Connect the equipment into an outlet properly installed.
3. Place a bowl under the opening of the cone holder to recover the shredded food.
4. Press the On / Off switch briefly once or twice before placing food in the feed tube.

This will ensure that the cone is properly attached to the drive shaft of the motor.

5. Hold the On / Off button and put the food to grate or slice.

Note: Use the feed tube to introduce ingredients

6. Use the pusher (if necessary) to push food inside.

At the end of the use,



7. Release the Start / Stop button to stop the unit.

8. Remove the electric plug from the outlet.

9. Remove the cone as described above.

10. Clean the device and accessories after each use, as described below.

Tip: Wash removable parts immediately under the tap, because once dry fruit pulp or leftover vegetable can be removed more easily.

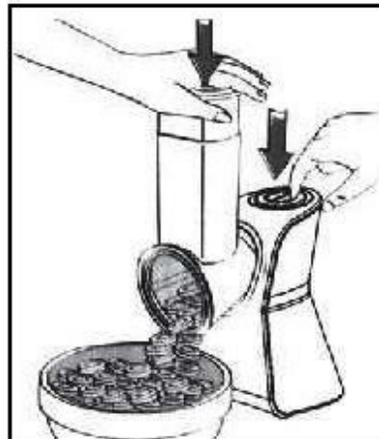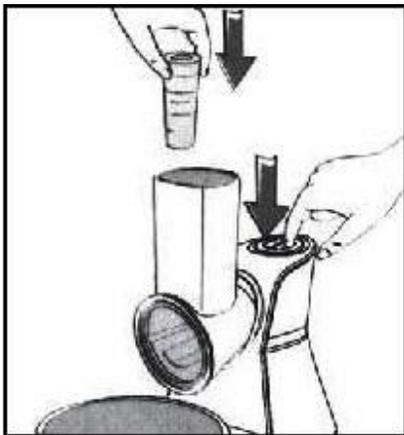

CLEANING AND MAINTENANCE

Be careful when handling the cones for cleaning. The stainless steel blade is extremely sharp and can cause severe cuts.

Always switch off the appliance, disconnect the apparatus and let it cool before cleaning.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like cones, holder, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box).

Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee !

In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted.

Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.
After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50-60Hz
Power	150W
Norm	Class II

The characteristics can change without preliminary preventing

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

CAUTION: If the electric cable is damaged, it must be replaced by the manufacturer, his after-sales service or people with similar qualification, in order to avoid any danger. In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD). This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous bois - France**