

## Rechargeable Shaver

### INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

## IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
  - staff kitchen areas, in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ❑ Children shall not play with the appliance.
- ❑ Cleaning and user maintenance shall not be made by children without supervision.
- ❑ This device is not a toy, do not leave small children or people with disabilities to play with.
- ❑ In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- ❑ Caution ! Do not allow small children to play with the foil :  
**THERE IS A DANGER OF SUFFOCATION !**
- ❑ From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- ❑ Never immerse the appliance in water or any other liquid for any reason whatsoever.
- ❑ Never place it into the dishwasher.
- ❑ Never use the appliance near hot surfaces.

- ❑ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person<sup>(\*)</sup> in order to avoid a hazard.
- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device complies with standards relating to this type of product.

(\*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

### **WARNING FOR PARTICULAR PRODUCTS TO USE IN A BATHROOM**

To provide additional protection, in the electrical circuit supplying the bathroom, a residual current device (RCD) with a rated residual current not exceeding 30mA operation, is recommended. Consult your installer.

NOTE: A thermal fuse, is not a residual current device (RCD).

## FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

## KNOW YOUR APPLIANCE

1. Outer foil
2. Opening buttons for the shaving head housing
3. On/off switch
4. Light Indicator
5. Socket for power cable
6. Trimmer
7. Trimmer opening button
8. Cleaning brush



## USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.
- The appliance is equipped with inner battery with 12H charging time.

- In order to increase the battery life span charging should be done in one uninterrupted cycle after full discharging.
- When the battery is being loaded the control lamp is on (4).
- NOTE the control lamp will not go out after the battery has been loaded up.
- The appliance may be used after the battery has been loaded up.
- The electric shaver starts its operation when the main switch (3) is in “ON” position.
- Softly touch your skin and move in the contrary growth direction of beards slowly.
- If you stretch your skin tightly, you can obtain better effect.
- Once the shaving is over, push the switch down at once and cover it with the shelter.

**NOTE :** Charging time can't exceed 12 hours or it affects the life of battery, even damages the line.

### Trimmer

1. Open the back cover and pull off the trimmer.
2. Softly touch your skin in the right-angle direction with the trimmer and trim slowly.
3. After using, push down the switch and cover it with the shelter.
4. Press the switch and take off the shelter. Press the outer-cutter button and take off the outer cutter. Clean the beards on the outer cutter, the inner cutter and the body (1 time a week).
5. After cleaning, assemble the outer cutter and the inner cutter on the original position and cover it with the shelter.
  - Don't press the net shelter.
  - Don't prizes open the net shelter with a screw with a screw driver.



### Maintenance

1. Remove the grid, Pressing the buttons (2).
3. Also press the button on the back of the unit to remove the trimmer.
4. Remove the beard hairs with the brush provided and, if necessary, use a damp cloth to clean the body.
5. After cleaning, reassemble the razor head with body in accordance with the initial position and place the trimmer on the original position.
6. Replace the cover.

### Charging

1. Push the switch down and close electrical power.
2. Connect the plug to the unit then to the main power.

- The charging indicator is on, which shows that it is charging.
  - After 12 hours, charging is over. Charging power is 220-240V~ 50Hz.
3. At first using, be sure the scored power is completely out, before charging, which can durable the battery.
  4. The shaver can be used for about 5 or 6 times for shaving.

## **CLEANING AND MAINTENANCE**

- \*Before cleaning switch the device off with the on/off switch. Open the battery compartment. Take the cleaning brush out of the holder on the battery compartment over and remove the battery form the battery compartment.
- \*Turn the shearing head to the left to loosen it and then pull it out. Pull out the shearing blade with caution. Warning: the cutting blade is sharp! DANGER OF INJURY!
- \*Brush the shearing head and clamp in a star-shaped manner. Remove even the smallest bits of hair by blowing.
- \*Mount the shearing head back on the drive shaft of the device and screw it on b turning to the right.
- \*After cleaning insert the cleaning brush back into the holder, insert the battery and close the battery cover.
- \*Push the protection cap back on the shearing head.

Before cleaning switch off the appliance

Always disconnect the apparatus and to let it cool before cleaning.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

## **STORAGE**

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

## **GUARANTEE**

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 12 months starting from the date of purchase.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase. The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay ! In the event of foreign intervention, the guarantee becomes null and void. After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

## SPECIFICATIONS

### Razor

Power supply	220-240V~ 50Hz
Power	3W
Norm	Class II
Battery	Ni-Mh 500mAh

*The characteristics can change without preliminary preventing*

For additional protection, the installation of a residual current device with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

CAUTION: If the electric cable is damaged, it must be replaced by the manufacturer, his after-sales service or people with similar qualification, in order to avoid any danger. In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.


This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD). This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

### ENVIRONMENTAL PROTECTION (Destruction of Ni-MH or Ni-Cd batteries)

The appliance must be disconnected from the main power, when the battery is removed.

To remove the battery:

- Remove the two screws located in the upper part,
  - Remove the screws at the back under the plate.
  - Disassemble the two parts of the unit and remove the battery.
- THE BATTERY MUST BE REMOVED BEFORE THE UNIT IS GIVEN TO REBUS.
- THE BATTERY MUST BE ELIMINATED IN A SAFE WAY.

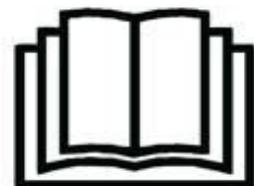

## GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

The symbol "FLASH" is intended to alert the user to the presence of current within the device. Do not open it, it could constitute a risk of electric shock.

The symbol "QUESTION MARK" warns the user that important operating and maintenance are contained in the record.

The symbol "TUB / SHOWER" crossed out means to never use the unit in a bathroom, a shower in or near water spray. (IP20 Minimum distance 3M.)

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.

The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol "RECYCLING" raise consumer awareness on the need to recycle its waste. Recycling is a process by which materials that compose a product in end of life (industrial or household waste) are reused in whole or part and will be returned to the initial production cycle.

The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.

The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak

concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "HOT WALL" warns the user that the walls of the unit can become very hot, and to take precautions as required.

The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

The symbol "MAN" means that the device can be used on the skin or human orifices. (Example: Thermometer).

**Imported by Sotech International  
" LE PERIPOLE " N°C111 à 115  
33, Avenue du Marechal de Lattre de Tassigny  
94120 Fontenay sous bois - France**

