

HAIR AND BEARD TRIMMER

Instruction manual

TTN-974



TTN-976



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ The appliance can be used by children aged from 3 years under supervision.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or

mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- ❑ Children shall not play with the appliance.
- ❑ Cleaning and user maintenance shall not be made by children without supervision.
- ❑ In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- ❑ Caution! Do not allow small children to play with the foil:

THERE IS A DANGER OF SUFFOCATION!

- ❑ From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- ❑ Never immerse the appliance in water or any other liquid for any reason whatsoever.
- ❑ Never place it into the dishwasher.
- ❑ Never use the appliance near hot surfaces.
- ❑ Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ **WARNING:** Keep the appliance dry.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.

- The appliance is only to be used with the power supply unit provided with the appliance.
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- The device must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- Make sure the appliance has cooled down before cleaning and storing it.
- The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- Before cleaning, always unplug the appliance from the power supply and let it cool down.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Always remove the plug from the wall socket when the appliance is not in use.
- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.
- The appliance must be used and rested on a table or flat & stable surface.

- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- **Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.**
- This appliance is only intended for household use.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

PARTICULAR WARNING FOR PRODUCT USE IN A BATHROOM

- Switch off when not in use, even if for a moment.
- Unplug it after use, since the proximity of water presents a hazard, even when the unit is switched off.
- Do not use this product while taking a shower or bath. Always unplug the device even close between 2 uses.
- When the unit is used in a bathroom unplug it after use since the proximity of water presents a risk, even when the power is off.
- To provide additional protection, in the electrical circuit supplying the bathroom, a residual current device (RCD) with a rated residual current not exceeding 30mA operation, is recommended. Consult your installer.

NOTE: A thermal fuse, is not a residual current device (RCD).

- Do not use this product while taking a shower or bath.
- Always unplug the unit itself between two closely spaced uses.
- For example: Stop the machine and unplug it if you drop it while you dry.

BEFORE THE FIRST USE

Before first use, remove the device and all accessories and being careful with sharp accessories.

- Clean the apparatus according to the instructions in "Cleaning and Maintenance" paragraph.
- Place the machine on a suitable flat, stable surface.

TO KNOW THE APPLIANCE



1. Comb
2. Special lubricating oil
3. Nasal hair remover
4. Base
5. Cutting head used
6. Scissor
7. Shaver
8. Adjustable cutting guide (1 to 5 mm)

A. Handle + Interchangeable head + ON/OFF switch

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

Function:

This unit can cut Hair, Beard & nose hair.

It is rechargeable.

It can be used without power cord, it allows full manoeuvrability without limit due to the wire.

CHARGING

This unit operates on rechargeable battery.

To recharge the battery:

Make sure the switch is off (OFF), insert the plug of the charger into the unit. It starts charging.

The device can work up to 30 minutes after being charged.

(The first time, charge the unit for 8 to 12 hours.)

Shaver

Insert the shaver head on the device. See below:

Push bottom of head



Push the head on the appliance on the hand to avoid dust get out

Fixing blade



Insert A part then B part



Push on the head to close

Gently touch your skin and move the razor in the opposite direction of hair growth. Once the shaving done, push the switch down and replace the cover.

Clipper

Insert the clipper head on the device. See below:

Push bottom of head



Push the head on the appliance on the hand to avoid dust get out

Fixing blade



Insert A part then B part

Push on the head to close

Replace the head up by the mower

Adjust the length of cut with the cutting guide.

Push the switch up.

Gently touch your skin and move the razor in the opposite direction of hair growth. Once the shaving done, push the switch down and replace the cover.

You can use adjustable cutting guide to cut hair or beard of 1 to 5 mm.

Nasal hair remover

To shave the hair of the nostrils and ears, after changing the head as see below:

Push bottom of head



Push the head on the appliance on the hand to avoid dust get out

Fixing blade



Insert A part then B part

Push on the head to close

Push the switch up.

Insert the rotating head of the epilator in the nostril, taking care not to touch the nasal wall.

Carefully approach the rotating head cut nose hair or unwanted ear.

Note:

NEVER TOUCH THE ROTARY HEAD, MOVING WITH FINGER OR ANY PART OF THE BODY TO AVOID INJURY.
DO NOT INSERT ANY OBJECT IN THE HEAD UNIT, THAT WILL DAMAGE IT.
CLEANING AND MAINTENANCE

CLEANING AND MAINTENANCE

Before cleaning, always: switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are:

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay!

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

ADAPTER

| | | |
|--------------|--------|--------------------------------|
| Power supply | Input | : 100-240V~ 50/60Hz / 0.2A Max |
| | Output | : 3.0 V d.c. 1.0A 3.0W |
| Norm | Class | Class II |

UNIT

| | |
|-----------------|---------------|
| Battery Voltage | 2x1,2 V d.c. |
| Power supply | 3,0 V d.c. |
| Charging time | 8 to 12 hours |
| Using time | 30 minutes |

Made in P.R.C

| INFORMATION PUBLIEE INFORMATION PUBLISHED | VALEUR ET PRECISION VALUE AND PRECISION | UNITE UNIT |
|--|--|---------------|
| MARQUE | TECHWOOD | |

| | | |
|--|---|----|
| BRAND | Sotech International Commercial Registration Number/N°SIRET: 4250992000016 33 Avenue du Maréchal de Lattre de Tassigny 94120 Fontenay sous Bois - France | |
| REFERENCE MODEL IDENTIFIER | TTN-974 – TTN-976 | |
| Tension d'Entrée Input Voltage | 100-240 | V |
| Fréquence du CA d'entrée Input AC frequency | 50/60 | Hz |
| Tension de sortie Output voltage | 3.0 | V |
| Courant de sortie Output current | 1.0 | A |
| Puissance de sortie Output power | 3.0 | W |
| Rendement moyen en mode actif Average active efficiency | 71.59 | % |
| Rendement à faible charge (10%) Efficiency at low load (10%) | - | % |
| Consommation électrique hors charge No-load power consumption | 0.052 | W |

The characteristics can change without preliminary preventing

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

ENVIRONMENTAL PROTECTION (Destruction of batteries)

To remove the battery:

The appliance must be disconnected from the supply mains when removing the battery.

- Open the battery compartment and retrieve the battery or batteries.
- THE BATTERY MUST BE REMOVED BEFORE THE UNIT IS GIVEN TO REBUS.

- BATTERY CONTAINS NICKEL CADMIUM AND / OR LITHIUM AND / OR NICKEL-METAL HYDRIDE, THE BATTERY MUST BE ELIMINATED IN A SAFE WAY. DO NOT THROW IN A TRASH CAN, BUT GIVE IN CENTRE OF WASTE.

**Imported by Sotech International
" LE PERIPOLE " N°A107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous Bois - France**